# Installation Instruction

### Stainless Steel Soap Dispenser



### Before Your Installation

Check to make sure you have the following parts indicated below:




#### Tools You Will Need



## Replacement Parts


Keep this manual for ordering replacement parts.

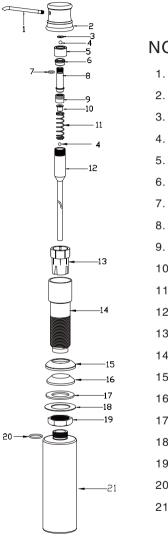


#### NO NAME

- 1. Tube
- Pump cover
- Spring ring
- 4. Round bead
- Connector
- 6. O-ring for tie-in
- 7. O-ring
- 8. Plunger
- 9. Sealing part
- 10. Anti-friction gasket
- 11. Spring
- 12. Straw
- 13. Plastic cover
- 14. Connector rod
- 15. Flange
- 16. Plastic part under flange
- 17. Washer
- 18. Stainless steel washer
- 19. Hexagon nut
- 20. O-ring
- 21. Tank

# **Product Dimension Drawing**

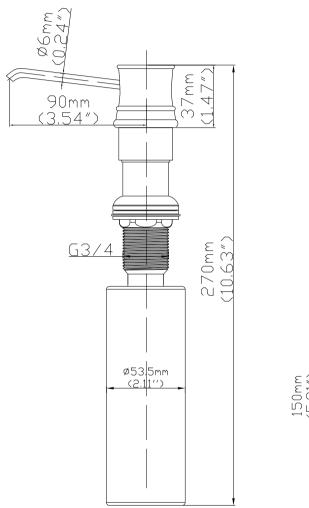

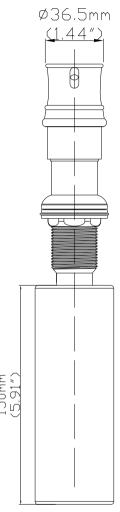

## Faucet Installation Procedures

