



FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
★ 1	06-82-5560	10-24 x 1/2 Pan Hd. Slit. Taptite T-25	(1)	107	42-92-1085	Bearing Clamp Cover	(1)
2	02-80-6100	Bearing Shaft Assembly	(2)	108	42-92-1090	Axle Cover	(1)
6	02-40-1060	Linear Ball Bearing	(2)	109	42-92-1100	Torque Arm Cover	(1)
7	02-80-0130	Needle Thrust Bearing	(1)	114	43-62-1052	Table Lock Handle	(1)
8	06-10-1153	5/16-18 x 1-1/4 Carriage Bolt	(1)	★ 115	14-34-0205	Adj. Knob Assembly (Incl. 06-55-1985 Nut)	(1)
11	06-55-2710	7/16-14 Hex Nut	(1)	119	43-82-0150	Bevel Angle Indicator	(1)
12	06-57-1100	10-24 Locknut	(1)	122	43-84-0860	Hex Insert	(1)
13	06-57-5045	5/16-18 Locknut	(2)	123	43-98-0610	Knob	(1)
17	06-81-3172	5/16-18 x 1 Hex Drive Taptite Screw	(6)	125	44-10-0330	Fence Clamp Lever	(1)
18	06-82-3792	8-32 x 3/8 Flat Hd. Taptite T-15	(2)	128	44-20-0255	Detent Lock	(1)
19	06-82-5270	6-32 x 1/4 Pan Hd. Slit. Taptite T-15	(2)	131	44-60-1095	Traverse Pin	(1)
★ 20	06-82-5314	10-24 x 1/2 Pan Hd. Slit. Taptite T-25	(27)	132	44-60-1410	Lock Pin	(1)
21	06-82-5338	1/4-20 x 1/2 Pan Hd. Taptite T-30	(4)	133	44-66-6060	Clamp Plate	(1)
28	06-82-8844	8-32 x 3/8 Pan Hd. Machine Screw	(2)	134	44-66-6070	Mounting Plate	(1)
31	06-82-9680	1/4 x 1-1/2 Cap Shoulder Screw	(1)	135	44-66-6080	Detent Plate	(1)
33	06-83-6035	1/4-20 x 3/8 Hex Socket Set Screw	(2)	136	44-66-6110	Kerf Plate	(1)
34	06-83-3125	1/4-20 x 3/4 Hex Socket Set Screw	(2)	137	44-66-6121	Detent Ball Plate Assembly	(1)
35	06-83-3126	3/8-16 x 3/8 Hex Socket Set Screw	(1)	138	44-66-6170	Locking Plate / Rod Guide	(1)
37	10-15-0600	Trilingual Label	(1)	140	44-72-0010	Miter Scale Pointer	(1)
41	10-15-9460	Warning Label	(2)	141	44-72-0110	Bevel Scale Pointer	(1)
42	10-15-9480	Warning Label	(2)	144	44-86-0600	Overtravel Spring Retainer	(1)
44	10-20-1250	Label	(1)	145	44-94-0350	Guide Rod	(1)
51	22-38-0150	Cable Clamp	(3)	146	44-94-0405	Extension Rod	(1)
59	28-04-0360	Torque Arm	(1)	153	45-04-0910	5/16-18 x 7/8 Pan Hd. Taptite Sems T-30	(5)
60	28-06-1055	Table Assembly	(1)	★ 155	45-06-0559	Seal Kit	(1)
61	28-06-1060	Base Extension	(1)	156	45-08-0330	Table Shaft	(1)
62	28-06-1080	Base	(1)	158	45-14-0250	Bearing Support Shim	(1)
63	28-12-0150	End Cap	(1)	159	45-58-0333	Bevel Clamping Stud	(1)
65	28-35-0020	Left Fence	(1)	160	45-60-0611	Cam Roller Support Assembly	(1)
66	28-35-0030	Right Fence	(1)	162	45-76-0450	Guide Tube	(1)
67	28-35-0040	Adjustable Fence	(1)	163	45-76-0460	Auxiliary Tube	(1)
68	28-90-0271	Bearing Support Assembly	(1)	164	45-88-8460	Vertical Adjustment Washer	(1)
72	28-90-0281	Auxiliary Tube Support	(1)	165	45-88-8540	Thrust Washer	(2)
76	31-58-0200	Traverse Lock	(1)	166	45-88-8805	Nylon Washer	(1)
79	34-40-3000	O-Ring	(1)	167	49-96-6205	Blade Screw Wrench	(1)
84	40-50-8170	Spring	(1)	169	14-46-2060	Clamp Mechanism Kit	(1)
85	40-50-8190	Disc Spring	(2)	170	45-04-0730	10-24 x 1/2" Shoulder Screw	(1)
86	40-50-8610	Conical Spring	(1)				
90	40-50-8620	Belleville Spring	(3)				
91	40-50-8660	Bevel Overtravel Spring	(1)				
93	40-50-8710	Auxiliary Bearing Spring	(1)				
94	42-12-0170	Axle	(1)				
100	42-70-5141	Blade Wrench Clip	(1)				