

REPLACING THE COMBUSTION PACKAGE RESOLUTE ACCLAIM MODEL# 2490

- STEP#1 Lift out the griddle. Remove the ash pan and dump the ashes. The pan is handy container for the hardware.
- STEP#2 Remove the front door. Open the door and pull down on the spring-loaded upper hinge pin. When the pin clears its recess, tilt the door slightly and lift it off the lower support pin. Remove the andirons.
- STEP#3 Lift out the front and back grate section. Remove the side bricks, lift or pry them upward until their bottom edges clear the retaining ridges on the left and right shoulder plates, then swing the forward edge of the firebricks towards the center of the firebox to remove them. When both side firebricks are out of the stove, the rear fire brick assembly will fall forward in to the firebox. Slide off the steel clip joining the two halves of the assembly, and lift the separate pieces out.
- STEP#4 Remove the two sealing plates at the left and right rear corners of the firebox. Each has a 7/16" head hex bolt holding in place.
- STEP#5 Two 1/4-20 hex head cap screws with washers secure the upper fireback assembly to the inside flange of the stove back. The bolts are located half way up either end of the upper fireback. Remove the bolts and washers with a 7/16 socket and drop out the upper fireback assembly.
- STEP#6 Remove the secondary combustion package. Clean out the firebox thoroughly. Vacuum out the entire firebox and ash drop area and the heat exchange areas to the sides of the refractory.
- STEP#7 Replace the secondary combustion package. Reassemble the stove in reverse sequence.

