



## IMPORTANT SAFETY INSTRUCTIONS

**WARNING** READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

### SAVE THESE INSTRUCTIONS

1. **SAVE THESE INSTRUCTIONS** - THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR THE REDLITHIUM® USB BATTERY CAT. NO. 48-11-2130 AND USB RECHARGEABLE LIGHT.
2. **USE AND CHARGE ONLY REDLITHIUM® USB BATTERIES** IN THIS USB RECHARGEABLE LIGHT. OTHER TYPES OF BATTERIES MAY CAUSE PERSONAL INJURY AND DAMAGE.
3. **BEFORE USING THE BATTERY AND LIGHT, READ THIS OPERATOR'S MANUAL AND ALL LABELS ON THE BATTERY AND LIGHT.**
4. **USE ONLY WITH LISTED/CERTIFIED ITE POWER SUPPLY.** Others may result in a risk of fire, electric shock or personal injury.
5. **AVOID DANGEROUS ENVIRONMENTS.** Do not charge battery in rain, snow, damp or wet locations. Do not use battery or charger in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when inserting or removing battery, possibly causing fire.
6. **CHARGE IN A WELL VENTILATED AREA.** Do not block charger vents. Keep them clear to allow proper ventilation. Do not allow smoking or open flames near a charging battery. Vented gases may explode.
7. **MAINTAIN CORD.** When unplugging charger, pull plug rather than cord to reduce the risk of damage to the electrical plug and cord. Never carry charger by its cord. Keep cord from heat, oil and sharp edges. Make sure cord will not be stepped on, tripped over or subjected to damage or stress. Do not use charger with damaged cord or plug. Have a damaged charger replaced immediately.
8. **USE ONLY RECOMMENDED ATTACHMENTS.** Use of an attachment not recommended or sold by the battery charger or battery manufacturer may result in a risk of fire, electric shock or personal injury.
9. **TO REDUCE THE RISK OF ELECTRIC SHOCK,** always unplug charger before cleaning or maintenance.
10. **DO NOT BURN OR INCINERATE BATTERY PACKS.** Battery may explode, causing personal injury or damage. Toxic fumes and materials are created when battery are burned.
11. **DO NOT CRUSH, DROP, OR DAMAGE** battery. Do not use a battery or charger that has received a sharp blow, been dropped, run over, or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on).
12. **DO NOT DISASSEMBLE.** Incorrect reassembly may result in the risk of electric shock, fire or exposure to battery chemicals. If it is damaged, take it to a MILWAUKEE service facility.
13. **BATTERY CHEMICALS CAUSE SERIOUS BURNS.** Never allow contact with skin, eyes, or mouth. If a damaged battery leaks battery chemicals, use rubber or neoprene gloves to dispose of it. If skin is exposed to battery fluids, wash with soap and water and rinse with vinegar. If eyes are exposed to battery chemicals, immediately flush with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.
14. **DO NOT SHORT CIRCUIT.** A battery pack will short circuit if a metal object makes a connection between the positive and negative contacts on the battery pack. Do not place a battery pack near anything that may cause a short circuit, such as coins, keys or nails in your pocket. Do not allow fluids to flow into battery pack. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit. A short circuited battery pack may cause fire, personal injury, and product damage.
15. **STORE** in a cool, dry place. Do not store battery where temperatures may exceed 120°F (50°C) such as in direct sunlight, a vehicle or metal building during the summer.
16. **TO REDUCE THE RISK OF INJURY, CLOSE SUPERVISION IS NECESSARY** when an appliance is used near children.
17. **STORE IDLE LIGHT OUT OF REACH OF CHILDREN.** Warm lights can become hazardous in the hands of children.
18. **KNOW YOUR LIGHT.** Read this manual carefully to learn your light's applications and limitations as well as potential hazards associated with this type of light.
19. **MAINTAIN LABELS AND NAMEPLATES.** These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

## READ AND SAVE ALL INSTRUCTIONS FOR FUTURE REFERENCE.

### SPECIFICATIONS

Cat. No. ....	2110-20
USB Input Volts .....	5 DC
USB Input Amps .....	0.1 - 2.1 A
Output Volts .....	4 DC
Output Amps .....	2.1 A
Battery Cat. No. ....	48-11-2130
Volts .....	4 DC
Operating Temperature	
Battery and Charger .....	40°F to 104°F (4°C to 40°C)
Battery and Tool .....	0°F to 149°F (-18°C to 65°C)
Power Supply Cat. No. ....	44-66-1202

### SYMBOLOLOGY

	Volts		Read Operator's Manual
	Direct Current		Properly Recycle Batteries
	Amps		BFP Backfeed Protected
	Do not stare into light		California Energy Commission

## BATTERY

**WARNING** To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

### Maintenance and Storage

Do not expose your battery or cordless tools to water or rain, or allow them to get wet. This could damage the tool and battery. Do not use oil or solvents to clean or lubricate your battery. The plastic casing will become brittle and crack, causing a risk of injury.

Store batteries at room temperature away from moisture. Do not store in damp locations where corrosion of terminals may occur. As with other battery types, permanent capacity loss can result if the pack is stored for long periods of time at high temperatures (over 120° F). MILWAUKEE Li-Ion batteries maintain their charge during storage longer than other battery types. After about a year of storage, charge the battery as normal.

**WARNING** To reduce the risk of injury or explosion, never burn or incinerate a battery pack even if it is damaged, dead or completely discharged. When burned, toxic fumes and materials are created.

### Disposing of MILWAUKEE Li-Ion Battery

MILWAUKEE Li-Ion batteries are more environmentally friendly than some other types of power tool batteries. Always dispose of your battery according to federal, state and local regulations. Contact a recycling agency in your area for recycling locations. Even discharged batteries contain some energy. Before disposing, use electrical tape to cover the terminals to prevent the battery from shorting, which could cause a fire or explosion.

## USB RECHARGEABLE 700L FLASHLIGHT

## LAMPE DE POCHE RECHARGEABLE PAR USB DE 700 L

## LINTERNA DE 700 L RECARGABLE CON USB

### RBRC Battery Recycling Seals

The RBRC™ Battery Recycling Seals (see "Symbology") on your batteries indicate that MILWAUKEE has arranged for the recycling of that battery with the Rechargeable Battery Recycling Corporation (RBRC). At the end of your battery's useful life, return the battery to a MILWAUKEE Branch Office/Service Center or the participating retailer nearest you. For more information, visit the RBRC web site at [www.rbrc.org](http://www.rbrc.org).

## USB RECHARGEABLE 700L FLASHLIGHT

**WARNING** Use and charge only REDLITHIUM® USB batteries in this USB rechargeable light. Other types of batteries may cause personal injury and damage.

### Inserting the Battery

1. Unscrew the back cap and remove the battery cradle.
2. Line up the arrow on the battery with the arrow in the compartment and fully insert the battery.
3. Insert the battery/cradle into the flashlight and screw on the back cap securely.

### Charging the Battery

1. Plug your USB cable into a power source such as an AC wall adaptor, computer or car port.
2. Twist the cap to expose the micro USB port. Insert the micro USB plug into the micro USB port.
3. The indicator light will display the charging status:  
Red Flashing: Charging, 0-25% charged  
Orange Flashing: Charging, 25-80% charged  
Green Flashing: Charging, 80-99% charged  
Green Solid: 99-100% Charged  
Red/Green Flashing: Damaged or Faulty Battery

If the light indicator flashes red and green, check that the battery is fully seated into the bay. Remove the battery and reinsert. If the light continues to flash red and green, the battery may be extremely hot or cold, or wet. Allow the battery to cool down, warm up, or dry out and then reinsert. If the problem persists, contact a MILWAUKEE service facility.

### Operation

**WARNING** To reduce the risk of injury, do not look directly into the light when the light is on.

The Flashlight has a dual function power button . Press the button firmly (click) to turn the light on or off, or select the mode. Press the button softly to use the momentary on, or cycle through the modes. Each time the button is pressed softly in under 1 second, the mode will change between High, Low and Strobe. To lock in the mode, press the power button firmly (click). To adjust the focus, slide the light head in and out.

The fuel gauge will display the battery life:

- Red Flashing: 0-10% remaining
- Red Solid: 10-25% remaining
- Orange Solid: 25-80% remaining
- Green Solid: 80-100% remaining

**WARNING** To reduce the risk of injury, always unplug the charger and remove the battery from the charger before performing any maintenance. The charger and battery have no internal serviceable parts. Never disassemble the battery or charger.

### Maintenance and Storage

Store your charger in a cool, dry place. As a general practice, it is best to unplug battery chargers and remove batteries when not in use. No battery damage will occur, however, if the charger and battery are left plugged in.

**WARNING** To reduce the risk of injury and damage, never immerse your battery or charger in liquid or allow a liquid to flow inside them.

### Cleaning

Clean out dust and debris from charger vents and electrical contacts by blowing with compressed air. Use only mild soap and a damp cloth to clean the battery and charger, keeping away from all electrical contacts. Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around batteries, charger, or tools.

### SERVICE - UNITED STATES

**1-800-SAWDUST (1.800.729.3878)**

Monday-Friday, 7:00 AM - 6:30 PM CST

or visit [www.milwaukeetool.com](http://www.milwaukeetool.com)

Contact Corporate After Sales Service Technical Support with technical, service/repair, or warranty questions.

Email: [metproductsupport@milwaukeetool.com](mailto:metproductsupport@milwaukeetool.com)

Become a Heavy Duty Club Member at [www.milwaukeetool.com](http://www.milwaukeetool.com) to receive important notifications regarding your tool purchases.

### SERVICE - CANADA

**Milwaukee Tool (Canada) Ltd**

**1.800.268.4015**

Monday-Friday, 7:00 AM - 4:30 PM CST

or visit [www.milwaukeetool.ca](http://www.milwaukeetool.ca)

### LIMITED WARRANTY - USA & CANADA

Every MILWAUKEE REDLITHIUM USB battery and charger\* is warranted to the original purchaser only to be free from defects in material and workmanship. Subject to certain exceptions, MILWAUKEE will repair or replace repair a REDLITHIUM USB battery or charger which, after examination, is determined by MILWAUKEE to be defective in material or workmanship for a period of two (2) years after the date of purchase unless otherwise noted. Return of the REDLITHIUM USB battery or charger to a MILWAUKEE factory Service Center location or MILWAUKEE Authorized Service Station, freight prepaid and insured, is required. For the proper shipping procedure of battery packs, contact 1.800.SAWDUST (1.800.729.3878), or go to [www.milwaukeetool.com](http://www.milwaukeetool.com). A copy of the proof of purchase should be included with the return product. This warranty does not apply to damage that MILWAUKEE determines to be from repairs made or attempted by anyone other than MILWAUKEE authorized personnel, misuse, alterations, abuse, normal wear and tear, lack of maintenance, or accidents. Normal Wear: This warranty does not cover repair or replacement when normal use has exhausted the life of a part including, but not limited to, charging cables, and wall plugs.

\*This warranty does not cover any cordless product sold with the REDLITHIUM USB battery and/or charger. There are separate and distinct warranties available for these products. ACCEPTANCE OF THE EXCLUSIVE REPAIR AND REPLACEMENT REMEDIES DESCRIBED HEREIN IS A CONDITION OF THE CONTRACT FOR THE PURCHASE OF EVERY MILWAUKEE PRODUCT. IF YOU DO NOT AGREE TO THIS CONDITION, YOU SHOULD NOT PURCHASE THE PRODUCT. IN NO EVENT SHALL MILWAUKEE BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, OR FOR ANY COSTS, ATTORNEY FEES, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY DAMAGE TO, FAILURE OF OR DEFECT IN ANY PRODUCT INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOSS OF PROFITS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, WRITTEN OR ORAL. TO THE EXTENT PERMITTED BY LAW, MILWAUKEE DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE. SUCH DISCLAIMERS ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. This warranty applies to product sold in the U.S.A. and Canada only.

Please consult the Find a Service Center Search in the Parts & Service section of MILWAUKEE's website [www.milwaukeetool.com](http://www.milwaukeetool.com) or call 1.800.SAWDUST (1.800.729.3878) to locate your nearest MILWAUKEE factory Service Center location.

### LIMITED WARRANTY - USA & CANADA

Every MILWAUKEE Personal Lighting Product\* (see exceptions below) is warranted to the original purchaser only to be free from defects in material and workmanship. Subject to certain exceptions, MILWAUKEE will repair or replace any part on a personal lighting product which, after examination, is determined by MILWAUKEE to be defective in material or workmanship for the lifetime of the personal lighting product. Return of the personal lighting product to a MILWAUKEE factory Service Center location or MILWAUKEE Authorized Service Station, freight prepaid and insured, is required. A copy of the proof of purchase should be included with the return product. This warranty does not apply to damage that MILWAUKEE determines to be from repairs made or attempted by anyone other than MILWAUKEE authorized personnel, misuse, alterations, abuse, normal wear and tear, lack of maintenance, accidents, or caused by alkaline batteries. Normal Wear: This warranty does not cover repair or replacement when normal use has exhausted the life of a part including, but not limited to clips, straps, charging cables, wall plugs, and rubber gaskets. This warranty does cover the LED in the personal lighting products, subject to the limitations herein.

\*This warranty does not cover Cordless Battery Packs or Chargers. There are separate and distinct warranties available for these products. ACCEPTANCE OF THE EXCLUSIVE REPAIR AND REPLACEMENT REMEDIES DESCRIBED HEREIN IS A CONDITION OF THE CONTRACT FOR THE PURCHASE OF EVERY MILWAUKEE PRODUCT. IF YOU DO NOT AGREE TO THIS CONDITION, YOU SHOULD NOT PURCHASE THE PRODUCT. IN NO EVENT SHALL MILWAUKEE BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, OR FOR ANY COSTS, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY DAMAGE TO, FAILURE OF OR DEFECT IN ANY PRODUCT INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOSS OF PROFITS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, WRITTEN OR ORAL. TO THE EXTENT PERMITTED BY LAW, MILWAUKEE DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE. SUCH DISCLAIMERS ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. This warranty applies to product sold in the U.S.A. and Canada only.

Please consult the Find a Service Center Search in the Parts & Service section of MILWAUKEE's website [www.milwaukeetool.com](http://www.milwaukeetool.com) or call 1.800.SAWDUST (1.800.729.3878) to locate your nearest MILWAUKEE factory Service Center location.

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

**AVERTISSEMENT** LIRE ET COMPRENDRE TOUTES LES INSTRUCTIONS. Le non-respect des instructions ci-après peut entraîner des chocs électriques, des incendies et/ou des blessures graves.

### CONSERVER CES INSTRUCTIONS

1. **GARDEZ CES INSTRUCTIONS – CE MANUEL CONTIENT DES INSTRUCTIONS D'OPÉRATION ET SÉCURITÉ IMPORTANTES À PROPOS DE LA PILE RECHARGEABLE PAR USB REDLITHIUM® N.° 48-11-2130 AINSI QUE LA LAMPE RECHARGEABLE PAR USB.**
2. **N'UTILISEZ NI NE CHARGEZ QUE LES PILES RECHARGEABLE PAR USB REDLITHIUM® DANS CETTE LAMPE DE POCHE RECHARGEABLE PAR USB. D'AUTRES TYPES DE PILES POURRONT ENTRAÎNER DES BLESSURES ET DOMMAGES.**
3. **AVANT D'UTILISER LA PILE ET LA LAMPE DE POCHE, LISEZ CE MANUEL DE L'OPÉRATEUR AINSI QUE TOUTES LES ÉTIQUETTES QUI SE TROUVENT SUR LA LAMPE DE POCHE ET LA PILE.**
4. **N'UTILISEZ QUE D'ALIMENTATION ÉLECTRIQUE LISTÉE/CERTIFIÉE TI.** D'autres pourront entraîner des risques d'incendie, chocs électriques ou blessures.
5. **ÉVITEZ DES MILIEUX DANGEREUX.** Ne chargez pas la pile dans des milieux ayant de la pluie, neige, humidité ni d'environnements mouillés. N'utilisez pas la pile ni le chargeur dans des atmosphères explosives (ayant des vapeurs gazeux, poudre ou matériel inflammable) parce que des étincelles pourront être créées lorsque la pile est insérée ou retirée, pouvant bien provoquer des incendies.
6. **CHARGEZ-LA DANS UN ESPACE BIEN AÉRIÉ.** Ne bloquez pas les bouches du chargeur. Préservez-les propres pour assurer une bonne aération. Ne laissez pas de fumées ni flammes déconstruites près d'une pile du chargeur. Les gaz aérés pourront exploser.
7. **PRÉSERVEZ LE FIL.** Lorsque le chargeur est débranché, tirez de la fiche en lieu du fil afin de réduire les risques de dommages sur tous les deux. Ne portez jamais le chargeur par son fil. Ne laissez pas que le fil soit exposé à chaleur, huile ni aux bords tranchants. Assurez-vous de laisser le fils dans un endroit où il ne pourra pas être marché, trébuché ou endommagé ni sous contrainte. N'utilisez pas le chargeur avec une fiche ou un fil endommagés. Demandez que le chargeur endommagé soit remplacé immédiatement.
8. **N'UTILISEZ QUE LES ACCESSOIRES RECOMMANDÉS.** L'utilisation d'un accessoire que ne soit pas recommandé ou vendu par le fabricant de la pile ou le chargeur pourra entraîner des risques d'incendies, chocs électriques ou blessures.
9. **AFIN DE RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE,** débranchez toujours le chargeur avant de le nettoyer ou l'entretenir.
10. **NE BRÛLEZ PAS NI N'INCINÉREZ PAS LES BLOC-PILES.** La pile pourra exploser, en entraînant des dommages ou blessures. Des vapeurs ou matériaux toxiques sont créés lorsque la pile est brûlée.
11. **N'ÉCRASEZ PAS LA PILE, NE LA LAISSEZ PAS TOMBER NI NE L'ENDOMMAGEZ PAS.** N'utilisez pas une pile ni un chargeur qui ait reçu un coup sec, été marché, écrasé ou endommagé de n'importe quelle forme (par exemple, percé par un clou, frappé par un marteau, marché).
12. **NE LE DÉASSEMBLEZ PAS.** Le démantèlement incorrect peut entraîner un risque de chocs électriques, incendie ou exposition à produits chimiques. Si l'outil est endommagé, amenez-le au centre de service MILWAUKEE.
13. **LES PRODUITS CHIMIQUES ENTRAÎNENT DES BRÛLURES GRAVES.** Ne permettez pas qu'ils entrent en contact avec la peau, les yeux ni la bouche. Si de la pile endommagée des produits chimiques se coulent, utilisez des gants en caoutchouc ou néoprène pour se débarrasser d'elle. Si la peau est exposée à des fluides de la pile, lavez-la avec du savon et de l'eau et rincez-la avec du vinaigre. Si les yeux sont exposés aux produits chimiques de la pile, lavez-les avec pleine de l'eau pendant 20 minutes et consultez un médecin. Retirez les vêtements contaminés et se débarrassez d'eux.
14. **ATTENTION AUX COURTS-CIRCUITS!** Un bloc-piles court-circuité si un objet métallique établit une connexion entre les contacts positifs et négatifs sur les bloc-piles. Ne placez pas un bloc-piles près de tout ce qui peut causer un court-circuit, comme des pièces de monnaie, des clés ou des clous dans votre poche. Ne pas laisser les fluides s'écouler dans le bloc-piles. Les fluides corrosifs ou conducteurs, tels que l'eau de mer, certains produits chimiques industriels, les produits de blanchiment ou de blanchiment, etc., peuvent provoquer un court-circuit. Un bloc-batterie court-circuité peut provoquer des incendies, des blessures corporelles et des dommages au produit.
15. **L'ENTRÉPOSEZ** dans un endroit sec et bien aéré. Ne mettez la pile où les températures pourront dépasser les 50 °C (120 °F), tels que la lumière du soleil, un véhicule ou un bâtiment en acier en été.
16. **AFIN DE RÉDUIRE LE RISQUE DE BLESSURES, SUPERVISION ÉTROITE EST REQUISE** quand un appareil est utilisé près d'enfants.
17. **TENEZ L'INDICATEUR DE REPOS HORS DE LA PORTÉE DES ENFANTS.** Des lumières chaudes peuvent être dangereuses dans la portée des enfants.
18. **CONNAISSEZ VOTRE LAMPE.** Lisez attentivement ce manuel de l'opérateur pour savoir à propos des applications et limitations de la lampe ainsi que les dangers possibles liés à ce type de lampe.
19. **PRÉSERVEZ LES ÉTIQUETTES ET PLAQUES NOMINATIVES.** Elles montrent d'information importante. Si elle est illisible ou manquante, contactez un centre de service MILWAUKEE afin de recevoir un outil substitutif gratuit.

## LIRE ET CONSERVER TOUTES LES INSTRUCTIONS POUR RÉFÉRENCE FUTURE.

### SPÉCIFICATIONS

No de Cat. ....	2110-20
Voltage d'entrée par USB .....	5 DC
Amprage d'entrée par USB .....	0,1 - 2,1 A
Voltage de sorti .....	4 DC
Amprage de sorti .....	2.1 A
Cat. de la pile .....	48-11-2130
Voltage .....	4 CD
Température opérative	
Pile et chargeur .....	4°C to 40°C (40°F to 104°F)
Pile et outil .....	-18°C to 65°C (0°F to 149°F)
No de Cat. de la prise d'alimentation .....	44-66-1202

### PICTOGRAPHIE

	Volts		Lisez le manuel de l'opérateur
	Courant direct		Recyclage correct des batteries
	Amprès		BFP Rétro-alimentation protégée
	Ne pas regarder dans la lumière		Commission à l'Énergie de la Californie

## BLOC-PILES

**AVERTISSEMENT** Pour réduire le risque d'incendie, de blessures corporelles et de dommages causés par un court-circuit, ne jamais immerger l'outil, le bloc-piles ou le chargeur dans un liquide ou laisser couler un fluide à l'intérieur de celui-ci. Les fluides corrosifs ou conducteurs, tels que l'eau de mer, certains produits chimiques industriels, les produits de blanchiment ou de blanchiment, etc., peuvent provoquer un court-circuit.

### Entretien et entreposage

Ne pas exposer votre bloc-piles ni vos outils sans fil à l'eau ou la pluie, ou les laisser prendre l'humidité. Cela pourrait endommager l'outil et le bloc-piles. Ne pas utiliser d'huile ou solvants pour nettoyer ou lubrifier votre bloc-piles. Le boîtier du bloc-piles risque de devenir cassant ou de se fendiller, causant un risque de blessure.

Entreposer les bloc-piles à température ambiante à l'abri de l'humidité. Ne pas les entreposer dans un endroit humide où la corrosion des bornes peut survenir. Comme pour d'autres types de batteries, une perte permanente de capacité peut survenir si le bloc-piles est entreposé pendant longtemps à haute température (48°C/120°F). Les piles Li-Ion MILWAUKEE maintiennent leur charge pendant plus longtemps que les autres types de piles. Après un an d'entreposage, rechargez le bloc-piles comme d'habitude.

**AVERTISSEMENT** Pour réduire le risque d'explosion, ne jamais brûler un bloc-piles, même s'il est endommagé ou complètement déchargé. Lorsqu'il est brûlé, des matières et vapeurs toxiques sont produites.



