

12"
304.8mm

6"
152.4mm



1 Dial 1 Outlet HOSE FAUCET TIMER

Temporizador de grifo de manguera de 1 selector y 2 salidas

Important, please read!

 


When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.



Filter traps dirt particles, prolonging life of timer. Clean filter regularly and replace if worn.

TIMER FEATURES

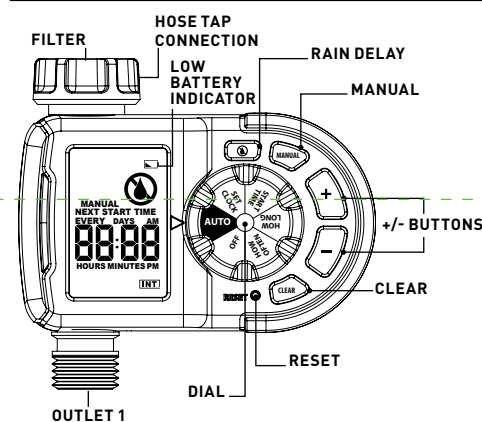

TIMER FEATURES

 
DIAL—Rotate the dial to customize your watering schedule

RAIN DELAY—Use this button to select RAIN DELAY mode

RESET—Press to clear all programming

MANUAL—Press to water manually

CLEAR—Press to clear programming

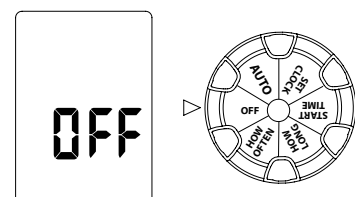

+/- BUTTONS—Use these buttons to adjust time and system setup

AUTO—Timer waters according to your customized schedule

SET CLOCK—Set the time of day

START TIME—Select what time you would like to start watering

HOW LONG—Determine how long to water

HOW OFTEN—Choose how often you will water

OFF—Turn off all watering

 
INSTALLING THE BATTERIES

1. Remove the tray on the back of the timer by sliding or pulling it out.
2. Insert two AAA (1.5V) alkaline batteries (not included) and replace the tray.

NOTE: Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not pull out easily. Used up or dead batteries must be removed from the timer and disposed of properly. Replace batteries when low battery icon appears on display. Do not dispose of batteries in fire. Batteries may explode or leak.


PROGRAMMING THE TIMER

SET CLOCK

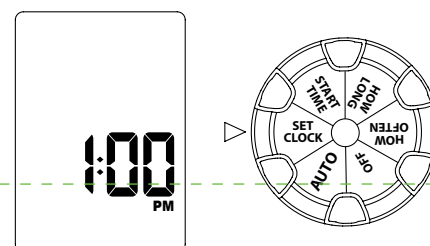


1. Turn dial to SET CLOCK.
2. Using the +/- buttons, set the time of day, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

 START TIME

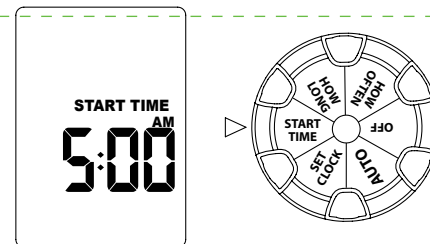


1. Turn dial to START TIME.
2. Using the +/- buttons, set your start time, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

 HOW LONG

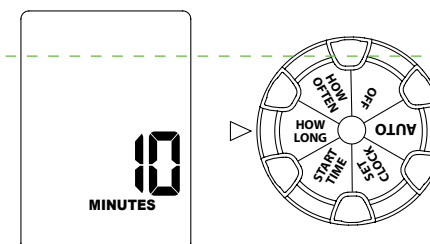

1. Turn dial to HOW LONG.
2. Using the +/- buttons, select watering duration from 1 to 360 minutes. Timer advances faster if button is held down.
3. Press CLEAR button to reset run time.
4. Turn dial to save changes.

 HOW OFTEN

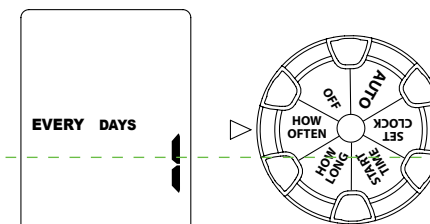

1. Turn dial to HOW OFTEN.
2. Using the +/- buttons, set your watering frequency. You may choose to water every 1 hour, 2 hours, 4 hours, 6 hours, 12 hours, or from 1 to 7 days.

Product not responsible for any damage caused by improper use. Any damage must be repaired by the user. Please read the manual for proper use. © 2015 Orbit, Inc. This work is the property of Orbit, Inc. All rights reserved. Use without permission.

Product Information
 Product Name: Hose Faucet Timer
 Part Number: 24695-24 rA
 Date: 05/26/2015
 Designer: NK
 Marketing: SW
 Artwork: 56419-24 rC
 Software: Adobe Indesign CS6

Dimensions
 Overall Dimensions: 12.0" W x 6.0" H
 Filter Dimensions: 12.0" W x 6.0" H
 Filter Dimensions: 3.0" W x 1.5" H

Raw Part Num: 24695-24 rA
 Size (in.): 12" W x 6" H
 Size (mm): 304.8 W x 152.4 H
 Material: Bleached paper
 Basis Weight: 18 lbs Calliper: 3.6 Mil
 Package Format: Instruction Sheet
 100% Scale
 Outside-face
 Outside Color: White
 Date: 1/29/2014
 Designer: J. Smolarski

12"
304.8mm

 
6"
152.4mm

NOTE: 1 is every day, 2 is every other day, etc
3. Turn dial to save changes

CONGRATULATIONS!
Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

ADDITIONAL FEATURES


RAIN DELAY

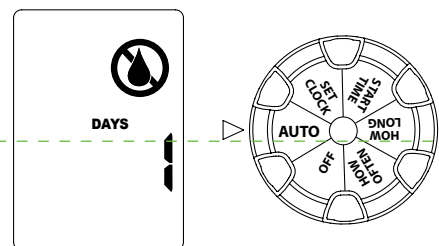

Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

1. With the dial on AUTO, press the button.
2. Using the +/- buttons select a delay of 1 to 7 days.
3. Screen will flash between clock and hours remaining before programmed cycle resumes.
4. To remove rain delay, turn dial to OFF and then back to AUTO.

 MANUAL/HAND WATERING

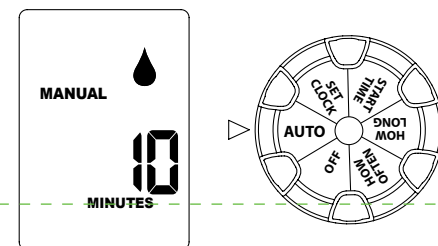

This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1. With the dial on AUTO, press the MANUAL button.
2. Use the +/- buttons to select watering time from 1 to 360 minutes.
3. Screen will flash between clock and hours remaining before programmed cycle resumes.

NOTE: There may be a slight delay between the time the manual button is pressed and when watering begins.

4. To stop manual watering, turn the dial to OFF.
5. Turn the dial back to AUTO to resume your programmed watering schedule.

TROUBLESHOOTING

WATER DOES NOT COME ON AT DESIRED TIME.

- Check if:
- Clock is set to correct time, including AM and PM.
 - Dial is set to "Auto"
 - Start time is set to desired time, including AM and PM.
 - Rain Delay is on.

TIMER DOES NOT WATER.

- Check if:
- Timer is set to AUTO.
 - Hose faucet is on.
 - Batteries are low.
 - Clock is set to correct time, including AM and PM.
 - Rain Delay is on.

WATER WON'T TURN OFF.

- Check if:
- HOW LONG is set to desired time.
 - HOW OFTEN is set to desired interval hour or day.

WORKING WATER PRESSURE:

- Minimum: 10 psi
- Maximum: 100 psi

WORKING TEMPERATURE:

- Maximum: Do not exceed 120°F
- Minimum: Keep from freezing

WARNINGS:

For outdoor use with cold water only.
Not for use with appliances.



Customer Service
1-800-488-6156

Orbit® Irrigation Products, Inc.
North Salt Lake, UT 84054

© 2015 Orbit Irrigation Products, Inc.
All rights reserved. All trade names are registered trademarks of respective manufacturers listed.

PN 56619-24 rC

Raw Part Num: 24695-24 rA
Size (in.): 12" W x 6" H
Size (mm): 304.8 W x 152.4 H
Material: Bleached paper
Basis Weight: 18 lbs Calliper: 3.6 Mil
Package Format: Instruction Sheet
100% Scale
Outside-face
Outside Color: White
Date: 1/29/2014
Designer: J. Smolarski