 


Push, Pull, Pedal Push and Pedal Handle Push Button

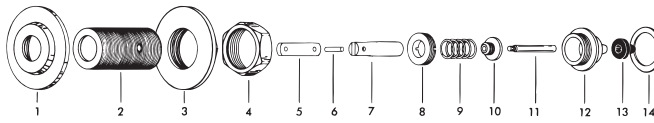


Pull Button For Concealed Royal® & Crown® (Seat Action)

| Item | | | |
|---------------------|----------------|----------|--|
| No. | Code No. | Part No. | Description |
| Repair Kit | | | |
| | 3303394 | C-62-A | Repair Kit contains item nos. 9-14 |
| Repair Parts | | | |
| 1. | 0302248 | B-23 | CP Wall Flange 2-3/4" O.D. |
| 2. | — | C-30 | In-Wall Sleeve. If required, consult factory. |
| 3. | 0302260 | B-24 | RB Locknut |
| 4. | 0301083 | A-6 | RB Coupling |
| 5. | — | C-27 | Link Available in Multiple Lengths. Consult factory. |
| 6. | 5303213 | C-29 | RB Pin |
| 7. | — | C-31 | Sleeve Available in Multiple Lengths. Consult factory. |
| 8. | 0203013 | C-48 | RB Sleeve Guide |
| 9. | * | C-28 | Spring |
| 10. | * | C-32 | Plunger Head |
| 11. | * | C-24 | Plunger Stem |
| 12. | * | C-61 | Special Bushing |
| 13. | 5302297 | B-39 | Seal |
| 14. | 5301139 | A-31 | Gasket |


*Available in kit only.

 Pedal Push Button For Exposed Royal® & Crown®

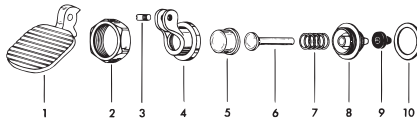

| Item | | | |
|---------------------|----------------|----------|------------------------------------|
| No. | Code No. | Part No. | Description |
| Repair Kit | | | |
| | 3302304 | B-40-A | Repair Kit contains item nos. 4-10 |
| Repair Parts | | | |
| 1-10. | 0303289 | C-33-A | Pedal RB Assembly |
| 1. | 0303293 | C-34 | CP Pedal |
| 2. | 0301082 | A-6 | Coupling |
| 3. | 5303298 | C-35 | CP Screw |
| 4. | * | C-33 | CP Socket |
| 5. | * | C-37 | CP Push Button |
| 6. | * | B-8-A | Plunger (Special) |
| 7. | 0303019 | C-7 | Spring |
| 8. | * | B-49 | Bushing |
| 9. | 5302297 | B-39 | Seal |
| 10. | 5301140 | A-31-P | Gasket |

 
*Available in kit only.

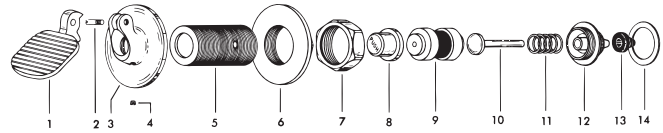

Pedal Push Button For Concealed Royal® & Crown®

| Item | | | |
|---------------------|------------------|----------|---|
| No. | Code No. | Part No. | Description |
| Repair Kit | | | |
| | — | C-40-A | Complete Pedal Push Button Assembly item nos. 1-14 LDIM required |
| | 3303398 | C-70-A | Push Button Repair Kit contains item nos. 10-14 |
| | 3303399 | C-77-A | Push Button Repair Kit contains item nos. 10-14 – Triple Seal Cone Seal |
| Repair Parts | | | |
| 1. | 0303293 | C-34 | CP Pedal |
| 2. | 5303298 | C-35 | CP Screw |
| 3-4. | 0303303 | C-40 | CP Flange w/Set Screw |
| 5. | — | B-6 | In-Wall Sleeve. If required, consult factory. |
| 6. | 0302260 | B-24 | RB Locknut |
| 7. | 0301082PO | A-6 | RB Coupling |
| 8. | 0303002 | C-2 | Index Push Button |
| 9. | — | B-15-A | N/A. Multiple lengths available. Consult factory. |
| 10. | * | B-8-A | Plunger |
| 11. | 0303019 | C-7 | Spring |
| 12. | * | B-41 | Bushing |
| 13. | 5302297 | B-39 | Seal |
| 14. | 5301139 | A-31 | Gasket |

 *Available in kit only.

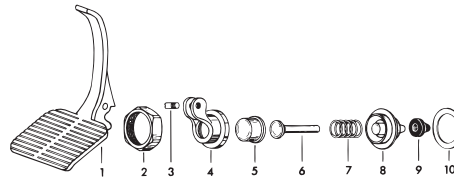

Pedal Handle Push Button For Exposed Royal® & Crown®

| Item | | | |
|---------------------|----------------|----------|--|
| No. | Code No. | Part No. | Description |
| Repair Kit | | | |
| | 3302304 | B-40-A | Repair Kit contains item nos. 4-10 |
| Repair Parts | | | |
| 1-10. | 0303290 | C-33-A | Pedal Handle PB Assembly – OBSOLETE |
| 1. | 0303295 | C-34 | CP Pedal Handle – OBSOLETE |
| 2. | 0301082 | A-6 | Coupling |
| 3. | 5303298 | C-35 | CP Screw |
| 4. | * | C-33 | CP Socket |
| 5. | * | C-37 | CP Push Button |
| 6. | * | B-8-A | Plunger (Special) |
| 7. | 0303019 | C-7 | Spring |
| 8. | * | B-49 | Bushing |
| 9. | 5302297 | B-39 | Seal |
| 10. | 5301140 | A-31-P | Gasket |

*Available in kit only.