


# TRONE

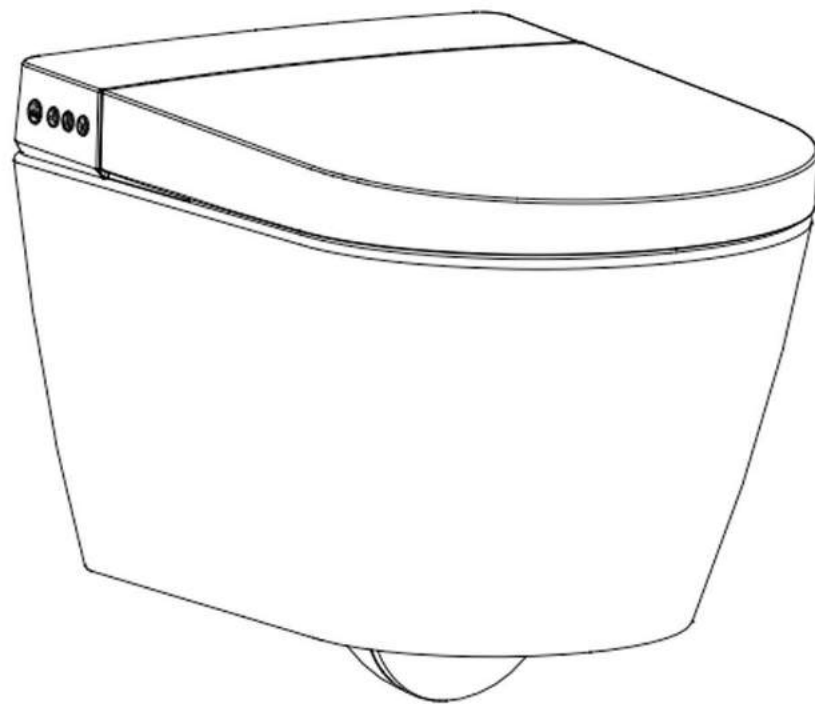

V7216 Manual



# TABLE OF CONTENTS

|     |  |       |
|-----|--|-------|
| 1.  | Safety precautions .....                 | 2     |
| 2.  | Signs and meanings .....                 | 2     |
| 3.  | Warnings.....                            | 3-6   |
| 4.  | Line drawings                            |       |
|     | 4.1.Remote Control .....                 | 7     |
|     | 4.2.Bidet Toilet.....                    | 8     |
| 5.  | Automatic Functions.....                 | 9     |
| 6.  | Getting to know your remote .....        | 10    |
| 7.  | Getting to know your lid and seat        |       |
|     | 7.1. Adjustable Seat temperature.....    | 10    |
| 8.  | Getting to know your bidet               |       |
|     | 8.1. Stop.....                           | 10    |
|     | 8.2. Rear Wash.....                      | 10    |
|     | 8.3. Adjustable Water Pressure .....     | 11    |
|     | 8.4. Adjustable Spray Wand Position..... | 11    |
|     | 8.5. Adjustable Water Temperature .....  | 11    |
|     | 8.6. Front Wash .....                    | 11    |
|     | 8.7. Drying.....                         | 11    |
|     | 8.8. Adjustable Drying Temperature ..... | 11    |
|     | 8.9. Eco Mode .....                      | 12    |
|     | 8.10. User Presets .....                 | 12    |
| 9.  | Getting to know your bowl                |       |
|     | 9.1. Night Light.....                    | 12    |
|     | 9.2. Automatic Flush .....               | 13    |
|     | 9.3. Quiet Mode.....                     | 13    |
| 10. | Pairing the remote .....                 | 13    |
| 11. | Full Description of Toilet Buttons ..... | 14    |
| 12. | Troubleshooting Guide .....              | 15-17 |
| 13. | Cleaning and care .....                  | 18-20 |
| 14. | Product specifications.....              | 21    |

# SAFETY PRECAUTIONS

Basic safety precautions must be followed when handling or using electrical products, especially those within the reach of children. Please make yourself aware of the following guidelines:

- This product should only be used by children who are 8 years and older or by persons with disabilities who have received supervision and instructions on the safe use and the hazards involved when using this product.
- It is unwise to allow children to play with this electronic bidet, supervised or not.
- It is not recommended that children who are unsupervised be allowed to clean and perform maintenance for this product.

## SIGNS AND MEANINGS



### **WARNING**

Improper operations due to ignorance of the instructions may result in death or injury



### **CAUTION**

Improper operations due to ignorance of the instructions may result in body injury and property loss



### **FORBIDDEN**

Not allowed



### **MUST**

Should be followed

# WARNINGS



Please do not touch the electrical outlet with wet hands.

- Or it may cause electric shock

Please do not pour liquids such as water or detergent on top of the electronic outlet and the toilet.

- Or it may cause fire, electric shock, heat or short circuit
- Or it may cause injury and indoor water seepage because of the damaged part

Never attempt to disassemble, repair, or alter the product yourself.

- Or it may cause fire, electric shock, heat or short circuit



Please do not install the toilet in the car, ship, or any other moving objects.

- Or it may cause fire, electric shock, short circuit or fault
- Or the ceramic, seat, and the main part will be damaged due to fall

Do not use if it is broken. Under the following condition, please turn off the toilet and the water angle valve.

- Water leakage from the pipe or inner parts of the toilet
- Smoke
- Unusual heating and smell
- Blockage



Continuous use of the toilet despite of the damages and above-mentioned conditions may result to fire, electric shock, heat, short circuit, injury, and indoor water seepage.

Please don't use seawater and other water except for tap water or potable well water (underground water)

- Or it may cause skin irritation or inflammation

During thunderstorms, do not touch the electrical plug

- Or it may cause electric shock

Please do not let the water inlet soft pipe connect to the electrical plug and outlet

- Or it may cause fire, electric shock, heat, and short circuit because of moisture condensation

Please do not damage the power cable or plug. Do not strike, yank, twist, bend excessively, or alter the electrical cords. Also, do not place anything heavy on, bind or pinch the cords

- Or it may cause fire, electric shock, heat, and short circuit if it's broken

Please do not use a loose or faulty electrical outlet

- Or it may cause fire or short circuit

Please use the electrical outlet and wire appliance in the specified outlet

- Or it may cause fire

Please do not put your finger or anything into the warm air outlet. Do not cover or put objects or clothes on the air outlet.

- Or it may cause scalding, electric shock, or fire







Pay attention to the low temperature scalding  
Improper use of warm seat may cause low temperature scalding

If you sit for a long time, please turn the temperature setting to "off level. Please turn the seat temperature setting to "off level, warm air-dry temperature to "low" level under the following situations

- Children and elders or those who cannot adjust the temperature to the proper level
- Persons with disability and patients with behavioral problems
- People who have taken medicines with side effects of hypnosis (hypnotics, cold meds, etc.), or those who are excessively drinking alcohol, too tired, and with somnolence



This is an electrical product, please do not install it in a place where it will get wet easily or in areas with high humidity. If installed in the bath-ram, please install a ventilator to maintain the bathroom ventilation.  
Or it may cause fire or electric shock

The product must be connected to the cold water supply

- Or it may cause body burn or machine fault

Please confirm if the electrical outlet is connected to the ground.

- Or it may cause electric shock because of fault or short circuit

The outlet for power wire should obey the following rules or it may cause fire or electric shock.

Please ask the maintenance team or similar department to replace the power soft wire if it is broken to avoid danger. Repair work must be done by professionals.



Please do not throw lighted cigarettes and other flaming material into the toilet.

- Or it may cause fire

Do not install this product in a room where it may be frosted. The room temperature can't be less than 39.2 degree Fahrenheit.

Don't block the air outlet



Do not use excessive force when closing the cover and the seat.

Do not intentionally soil, spray, or block the cleaning nozzle.

Pull out the plug regularly and clean off the dust with a dry cotton cloth.

Use the new hose parts that come with the product. The old ones should not be reused.

Keep the product away from the heater.


Close the water supply valve before taking out the junction block.

If you need to be away for a long time, be sure to plug it out, turn off the water, and drain the remaining water inside the bidet. The remaining water may freeze when the product is transported over long distances or stored for a long time in cold winter or alpine region.




# LINE DRAWINGS

## Remote Control

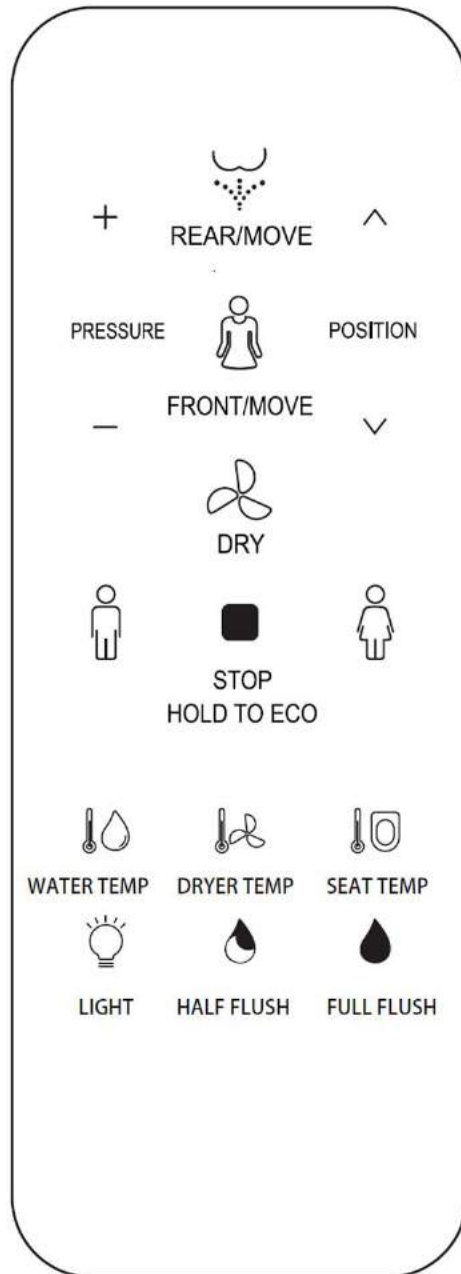


# Electronic Bidet

## Left side

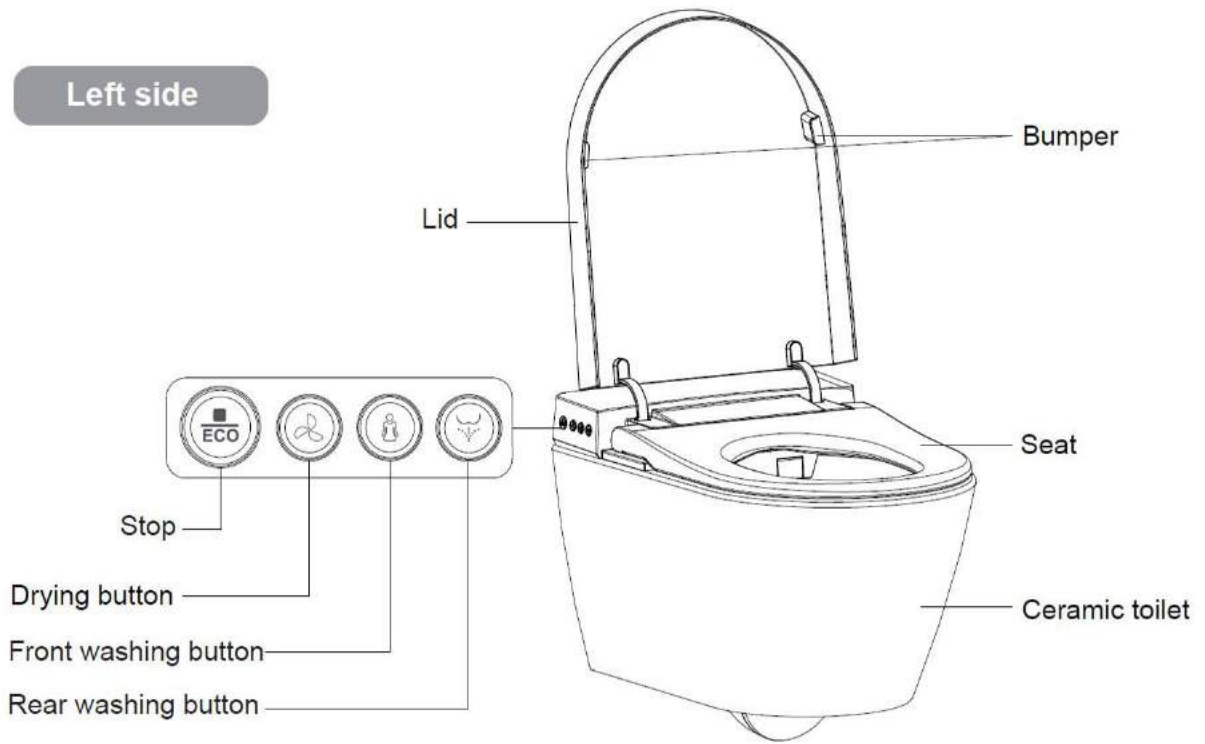

## Right side

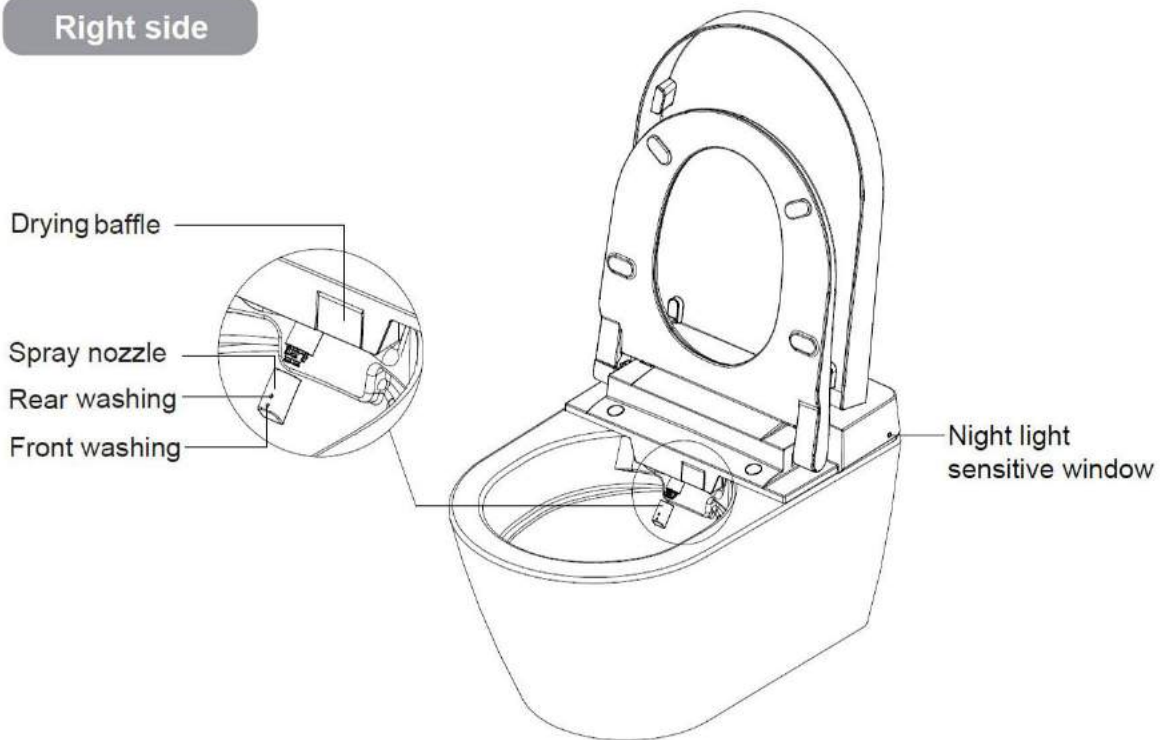


# AUTOMATIC FUNCTIONS


## Self-Cleaning Wand

The spray wand cleans itself before and after every use by rinsing itself as it enters and exits.

## Deodorizer


The deodorizer starts anytime the seat sensor has been activated. The deodorizer will stop automatically after a user leaves the seat for around 90 seconds. You can deactivate the automatic deodorizer by pressing and holding the Half Flush button [  ] for 3 seconds.

## Automatic Flush

The toilet will flush automatically approx. 5 seconds after leaving the seat. This setting can be turned on and off by pressing and holding the Flush/Auto Flush button [  ].


# GETTING TO KNOW YOUR REMOTE

## Level Indicator Light

- The Level Indicator Light [  ] will display the current level.



# GETTING TO KNOW YOUR LID & SEAT

## Adjustable Seat Temperature




- Press the Seat Temp button [  ] until the desired seat temperature is selected.

# GETTING TO KNOW YOUR BIDET

## Stop

- You can turn the toilet power on and off by pressing and holding the Stop button [  ] for approximately 2-3 seconds.
- Press the Stop button [  ] to immediately end any of the following functions: rear wash, front wash, & drying.

## Rear Wash

- When the user is seated, press the Rear/Move button [  ] to start rear washing. Press the Rear Wash button [  ] again to start the oscillating function (indicator level 1 begins flashing).
- Press the Stop button [  ] to stop Rear Wash.

## Adjustable Water Pressure

- When you are washing, use the Pressure buttons [ + - ] to increase or decrease the water pressure.

## Adjustable Spray Wand Position

- While washing, press the Position buttons [ ^ v ].
  - Note: You cannot adjust the wand position while using the oscillating feature.

## Adjustable Water Temperature

- Press the Water Temp button [ !💧 ] until the desired water temperature is selected.

## Front Wash

- When the user is seated, press the Front Wash button [ 👤 ] to start front washing. Press the Front Wash button again to start the oscillating function.
- Press the Stop button [ ■ ] to stop Feminine Wash.

## Drying


- When the user is seated, press the Dry button [ 🌀 ] to start the drying function.
- Press the Stop button [ ■ ] to stop drying.

## Adjustable Drying Temperature





- While you are drying, press the Dryer Temp button [ !🌀 ] until the desired air temperature is selected.



## Eco Mode

- Press and hold the Close/Power save button [  ] to turn on/off the Eco Mode. Eco Mode keeps the seat temperature lower when nobody is on the toilet.

## User Presets

- Press one of two user preset buttons [   ] and front or rear washing will begin. You can then set the water pressure, wand position, water temperature, and dryer temperature. After you have set everything to your likeness, press and hold the user preset button [   ] for 3 seconds to save the settings.



## GETTING TO KNOW YOUR BOWL


### Night Light

- Press the Light button [  ] to turn on/off the night light.


## Automatic Flush


 


- Press and hold the Full Flush button [  ] to turn this function on/off.


## Quiet Mode

- Press and hold the Seat Temp button [  ] to turn this function on/off. When activated, your toilet will not beep when changing settings.

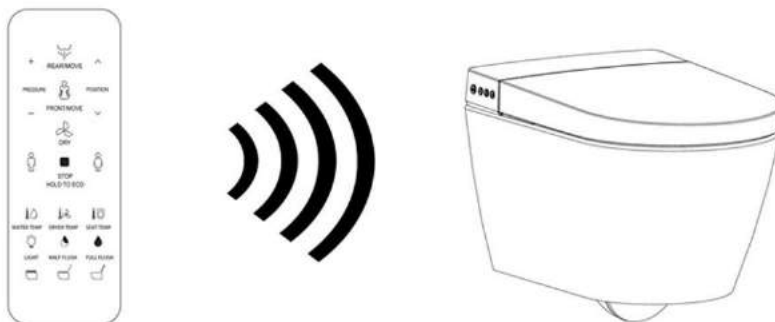



## PAIRING THE REMOTE

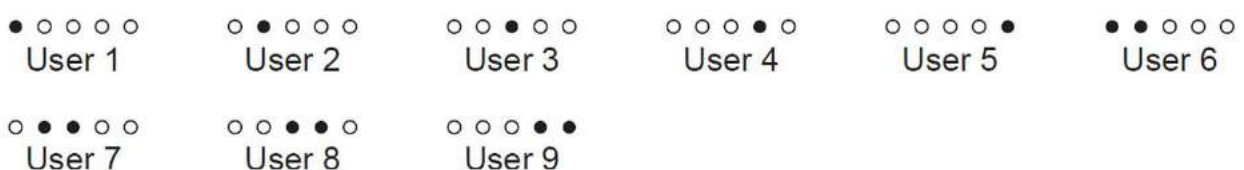

- 1) Unplug the toilet and wait 30 seconds.
- 2) Plug in the toilet, it beeps once when ready.
- 3) Press and hold the stop button [  ] AND Back button [  ] at the same time until the level indicator lights on the front of the remote start flashing.
- 4) Press the Pressure button [ + or - ] to select user 1-9 (figure shown below).
- 5) Press the Stop button [  ], then press the Rear/Move button [  ]. The main unit beeps once meaning it is paired successfully.



## Full Description of Toilet buttons

| Operation instructions of main unit buttons   |  |
|---|--|
|    | <ol style="list-style-type: none"> <li>1. Long press the "STOP" button (for about 3s), the main unit will enter power-off mode (red light will turn off). Long press the "STOP" button again, the main unit will return to working mode (red light will turn on). In power-off mode, all buttons cannot be used except the "STOP" button on main unit.</li> <li>2. While sitting on the unit, a short press to the "STOP" button can stop the ongoing front/rear washing or drying function. While not sitting on the unit, a short press to the "STOP" button can switch between working mode (red light) and energy saver (blue light).</li> </ol> |
|   | <p>While sitting on the unit, press "Dry" button to activate the drying function. Press "STOP" button to stop drying. It'll stop automatically after one cycle if the "STOP" button is not pressed.</p>  |
|  | <p>While sitting on the unit, press "FRONT/MOVE" button to activate front washing. During the front washing process, press "FRONT/MOVE" button to activate the front moving washing function. Press "STOP" button to stop washing.</p>   |
|  | <ol style="list-style-type: none"> <li>1. While sitting on the unit, press "REAR/MOVE" button to activate rear washing. During the rear washing process, press "REAR/MOVE" button to activate the rear moving washing function. Press "STOP" button to stop washing.</li> <li>2. While not sitting on the unit, short press "REAR/MOVE" button, the rod will extend outward to allow access for washing. After washing is completed, short press "STOP" button to retract rod.</li> </ol>  |

Tips: 1. In working mode, the power light is on and Energy Saver light is off. In Energy Saver mode, the power light is off and Energy Saver light is on. In standby mode, all lights are off.

2. All function settings are set to the middle level by default. Once the settings are changed by remote control or main unit buttons, these settings will be saved and stay unchanged for the next use.

## Toilet

| <b>Fault</b>   | <b>Failure Analysis</b>                   | <b>Solutions</b>   |
|--|---|--|
| Unclean flush when the water pressure is low                 | Angle valve filter blocked                | Clean the filter according to the manual                               |
|  | Too low water pressure                    | Measure if the water volume is 10L per 30s or not (buy a booster pump) |
|  | Bended water inlet pipe                   | Ensure that the water supply line is not kinked                        |
| Normal water pressure but flush is unclean and has no siphon | Outlet has air leakage                    | Consult a professional repair man                                      |
|  | S-pipe is blocked                         | Use a toilet dredge  |
| Normal water pressure but flush is not working               | Check if the angle valve is closed or not | Open the angle valve   |
|  | Flush valve failure                       | Consult a professional repair man                                      |

## Dryer/Fan/Seat Temperature

| <b>Fault</b>            | <b>Failure Analysis</b>                               | <b>Solutions</b>                                    |
|-------------------------|---|---|
| Drying with cold air    | Check the fan temperature setting if it's off or low  | Adjust the fan temperature according to the manual  |
| Seat is not warm enough | Check the seat temperature setting if it's off or low | Adjust the seat temperature according to the manual |

## Power Switch

| Fault               | Failure Analysis  | Solutions   |
|---------------------|---|---|
| Product Not Working | Check whether the socket has power or not and if the plug is loose.   | Check circuit   |
|                     | Check whether the toilet is turned on or not (if the side button is on or not)  | Press the power on/off button until the side button's light is on   |
|                     | Check whether the leakage protection button in the plug is on or off by checking the light of the leakage protection plug | Pull out the plug and connect it later. Press the reset switch of the leakage protection plug. If it's still not working, pull out the plug and ask a professional repair man for help. |

## Remote

| Fault              | Failure Analysis                              | Solutions                              |
|--------------------|---|--|
| Remote not working | Low battery                                   | Replace the old battery                |
|                    | Check if there is any water inside the remote | Dry the remote with a dry cotton cloth |



## General Problems


| Fault                                | Failure Analysis                                    | Solutions   |
|--------------------------------------|---|---|
| No water coming out from the nozzle  | Check if there's no water supply                    | Wait for water supply to be back to normal                                      |
|                                      | Check if the angle valve is closed or not           | Open the angle valve  |
|                                      | Check if the inlet water filter is blocked or not   | Clean the water filter  |
|                                      | Check if the water inlet pipe is bended or not      | Ensure that the inlet pipe  |
| Cleaning strength is not enough      | Check if the water pressure is set to low           | Increase the water pressure using the remote                                    |
|                                      | Check if inlet filter is blocked or not             | Clean the inlet filter  |
| Water temperature is not warm enough | Check if the water temperature is set to low or not | Adjust the water temperature according to the instructions given in this manual |
| Spray wand is always dripping water  | Solenoid valve failure                              | Consult a professional repair man   |
| Spray wand cannot be used            | Seat body induction failure                         | Consult a professional repair man   |

## CLEANING AND CARE

Note: Turn off the power, close the water supply angle valve, and stop the water supply before doing any maintenance work. DO NOT rinse this product with water during maintenance.


### Toilet Bowl Cleaning

- Please ensure that the electrical plug is taken out.
- Please use soft damp cloth to wipe the toilet shelf and seat. The dirt should be easily removed. If it's not, you may use neutral detergent.

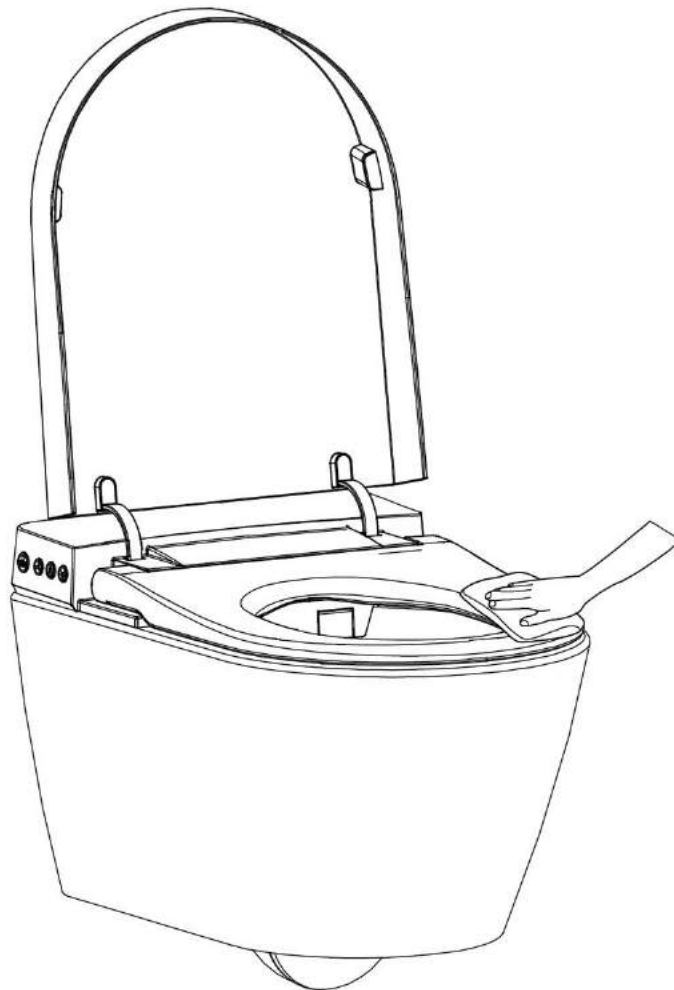


## Self-Cleaning Nozzle Maintenance

- While not sitting on the toilet, Press the Rear/Move button on the side of the toilet. The spray wand will then extend.
- Wash the cleaning tube and nozzle with a toothbrush coated with toothpaste.
- Do not use excessive force. Press the Stop button to take the nozzle tube back once you're done cleaning.

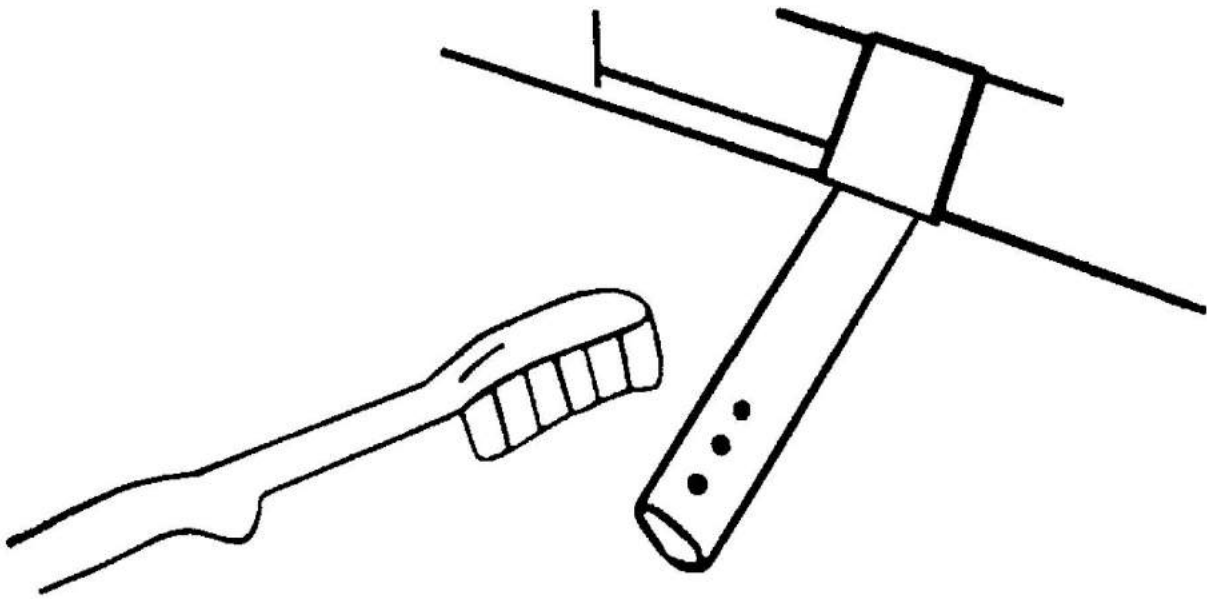

## Cleaning the Steel Mesh Filter

- When the cleaning strength becomes weaker, clean the steel mesh or replace the filter on time. Close the water supply angle valve when disassembling the filter.
- Disconnect the water inlet hose and remove the filter.

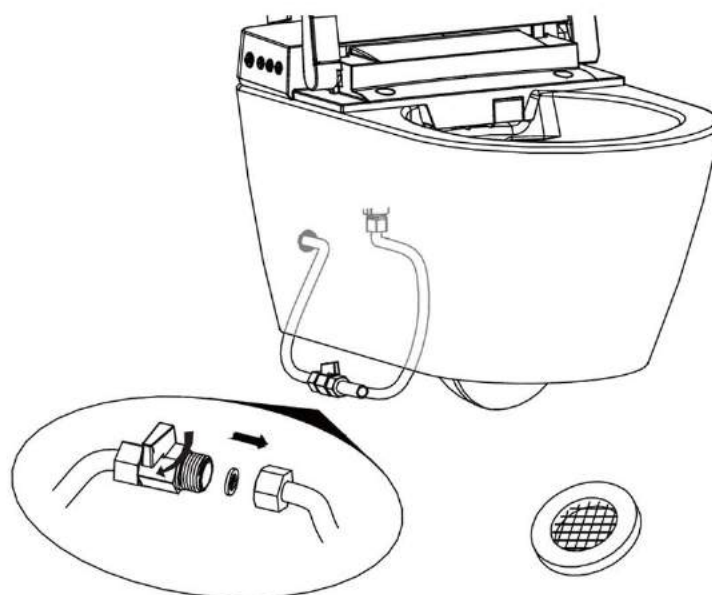

- Clean with water and toothbrush.

## Replacing the Remote Control Battery

- Remove the battery cover and recycle your old batteries.
- Replace with new batteries and slide on the cover.
  - Note: Keep the battery out of reach of children. Please confirm the positive and negative of battery. Do not change, disassemble, or burn the battery. Don't mix it with old batteries or different types of batteries to avoid leakage or explosion.

## PRODUCT SPECIFICATIONS

|                             |   |
|-----------------------------|---|
| Model Number                | V7216   |
| Rated Voltage               | 120V-, 60Hz   |
| Rated Power                 | 850W  |
| Power Cable                 | 7 feet  |
| Waterproof Level            | IPX4  |
| Cleaning Water Flow         | 3 adjustable temperature settings                   |
| Seat Temperature Adjustment | 4 Levels (Room temp to 102 °F)                      |
| Water Temperature           | 6 adjustable settings                               |
| Wind Temperature            | 6 adjustable levels                                 |
| Cleaning Time               | Normal cleaning is about 90 seconds                 |
| Safety Device               | Thermal fuse, Leakage protection device, Thermostat |
| Deodorization               | Diatoms Deodorization                               |



