

## OPERATION

### A: Blower Speed Selection Switch:

This 3-way rocker switch controls the blower speed.

Upper position: High speed.

Lower position: Low speed.

### B: ON/OFF Blower Switch:

This rocker switch turns the blower ON and OFF.

Left position: OFF.


Right position: ON.

### C: ON/OFF Light Switch:

This rocker switch turns the LED lights ON and OFF.

Left position: OFF.

Right position: ON.

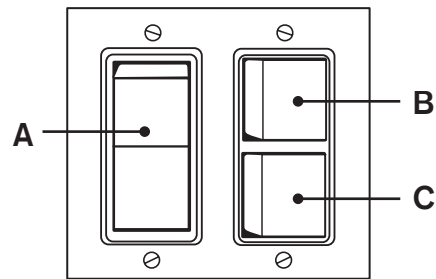

## HEAT SENTRY™

Your unit is equipped with a HEAT SENTRY™ thermostat.

This thermostat is a device that will turn on or speed up the blower if it senses excessive heat above the cooking surface.

- 1) If blower is OFF - it turns blower ON to HIGH speed.
- 2) If blower is ON at a lower speed setting - it turns blower up to HIGH speed.

When the temperature level drops to normal, the blower will return to its original setting.

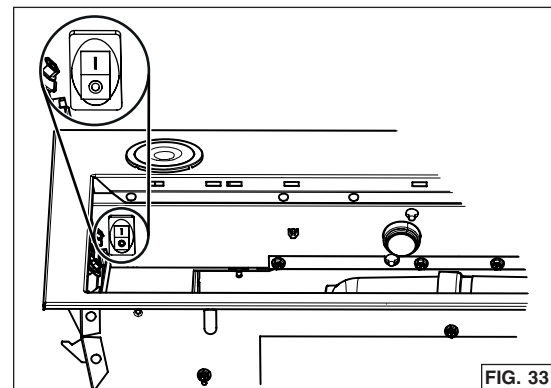


FIG. 33

## ⚠ WARNING

The HEAT SENTRY thermostat can start the blower even if the hood is turned OFF. When this occurs, it is impossible to turn the blower OFF with its switch. If you must stop the blower, set the main power switch (located behind the filters, on inner side of the unit faceplate) in OFF position (if it is possible to do so safely). See inset in FIG. 33.