
 
resideo



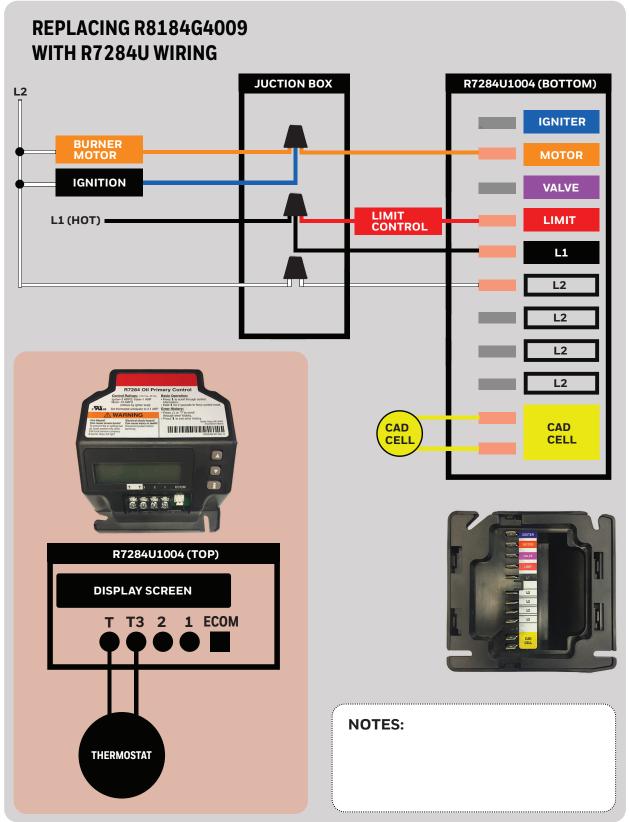

R7284U1004 INSTALLER SETUP

Installer setup is entered by pushing all three buttons simultaneously for 2 seconds.



If QUIT is selected, an "i" button press displays the Re-baseline option. If CONT is selected, an "i" button press goes to "Installer Setup".

M32092



Select between English, French, or Spanish by using the up or down buttons and the "i" button to select.

VALVE ON DELAY 0:15

Adjustment of the Valve On Delay in five second increments.

IGNITION TIME 0:15

Ignition (lockout) Time adjustment.

M32093

NOTE: The Ignition Time is only available for adjustment during the first 100 cycles of operation. After 100 cycles the ignition time is locked in and can no longer be adjusted.

BURNER OFF DELAY 2:00 Adjustment of the Burner Off Delay. Burner Off Delay can be adjusted in 15 second increments from 0 to 8 minutes.

TT CONFIGURED ON [NO] YES Configuration of the TT terminals vs. an "internal jumper." This option allows you to jumper the TT terminals electronically so no physical jumper is needed.

SPARK IN ON DLY [NO] YES

Controls sparking during On Delay period.

SPARK DURING RUN [NO] YES

Controls sparking during Run mode. (Interrupted versus intermittent ignition.)

ALLOWED RESETS 0 1 [3] NOLIM

Number of resets allowed before Restricted Lockout.

APPLIANCE TYPE
[BLR] FURN WH

Appliance configuration (boiler, furnace, water heater) for EnviraCOM™.

SHOW DIAGNOSTICS [NO] YES

Enable advanced diagnostics mode and error history. Selecting NO allows access to error history and diagnostics only by entering Installer Setup.

INSTALLER SETUP

Exit installer setup.

RE-BASELINE? [NO] YES If "QUIT" is selected, the user is prompted with a screen asking if it is desired to re-baseline the control.

M32101



www.resideo.com

Resideo Technologies, Inc. 1985 Douglas Drive North, Golden Valley, MN 55422 1-800-468-1502 34-00029-03 M.S. Rev. 04-21 | Printed in United States