

REPLACEMENT PARTS FOR MODELS 2001611 2001612 2001621 2001622

KEY NO.	DESCRIPTION	2001611	2001612	2001621	2001622
1	WRAPPER ASSEMBLY	K000275	K000275	K000275	K000275
2	DRAFT DIVERter ASSY.	K000274	K000274	K000274	K000274
3	COMBUSTION CHAMBER ASSEMBLY	K000279	K000279	K000279	K000279
4	BASE PLATE	K000265	K000265	K000265	K000265
5	VALVE BRACKET	K000266	K000266	K000266	K000266
6	CONTROL VALVE	P322052	P322051	P172200A	P172100A
7	BURNER ASSEMBLY	K000301	K000301	K000301	K000301
8	ORIFICE ADAPTER	P500393	P500393	P500393	P500393
9	BURNER ORIFICE	P090568	P090547	P090568	P090547
10	PILOT NAT.	_____	P500019	_____	_____
	PILOT L.P.G.	P500020	_____	_____	_____
10A	PILOT NAT.	_____	_____	_____	P322274
	PILOT L.P.G.	_____	_____	P322275	_____
11	THERMOCOUPLE	P322391	P322391	_____	_____
12	ELECTRODE	P322392	P322392	P322276	P322276
13	IGNITER BRACKET	7A189	7A189	7A189	7A189
14	VENT LIMIT CONTROL	P500406	P500406	P500406	P500406
15	THERMOSTAT	_____	_____	P322016	P322016
16	WIRE ASSEMBLY	P500409	P500409	P500409	P500409
17	MANUAL SPARK IGNITOR	P285500	P285500	P285500	P285500

FOR PARTS ILLUSTRATION, SEE PAGE 18

NOTE: Screws, bolts and washers are standard hardware items and may be purchased locally