

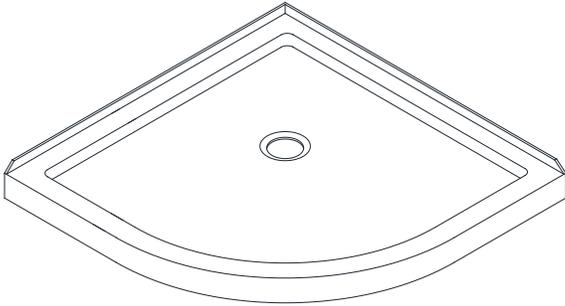


PRIME

SHOWER ENCLOSURE & BASE INSTALLATION INSTRUCTIONS

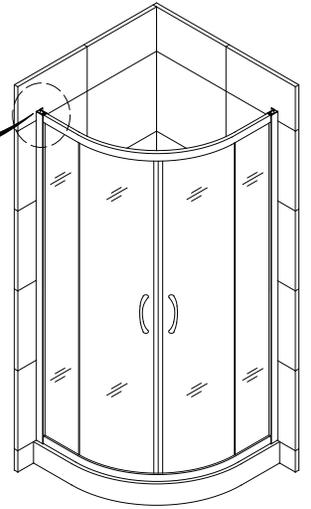

STEP 1: Shower Base Installation Instructions

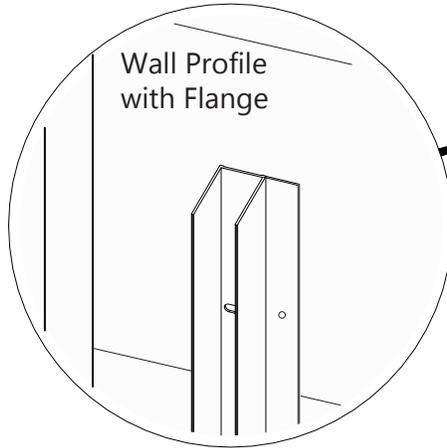

STEP 2: Shower Enclosure Installation Instructions



! CHOOSE the **APPROPRIATE MANUAL** for your model version

Wall Profile **WITH** Flange:
PRIME Manual Ver 1 Rev 3 122015

OR

Wall Profile **WITHOUT** Flange:
PRIME Manual Ver 2 Rev 1b 032019

OR

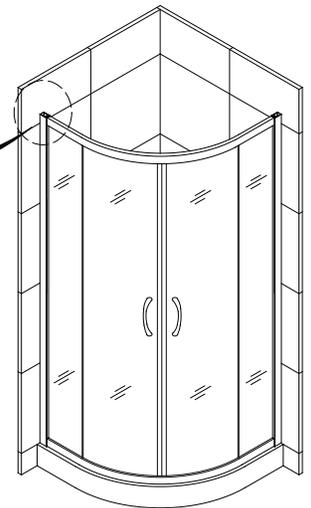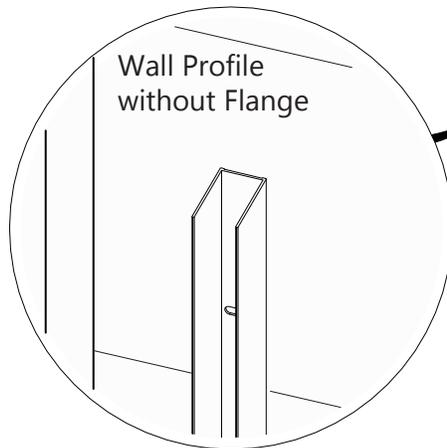

[CLICK HERE FOR MODEL SKU #s](#)



Questions?

Please Call DreamLine Customer Support: **1-855-831-2126**
Hours of Operation M-F 8AM - 7PM EST and Saturday 9AM - 5PM EST

Support@DreamLine.com



For more information about DreamLine[®] products please visit DreamLine.com

Prime Shower Enclosure and Base SKUs

Model Numbers:

DL-6701-01CL
DL-6701-01FR
DL-6701-04CL
DL-6701-04FR
DL-6701-22-01
DL-6701-22-01FR
DL-6701-22-04
DL-6701-22-04FR
DL-6701-89-01
DL-6701-89-01FR
DL-6701-89-04
DL-6701-89-04FR
DL-6702-01CL
DL-6702-01FR
DL-6702-04CL
DL-6702-04FR
DL-6702-22-01
DL-6702-22-01FR
DL-6702-22-04
DL-6702-22-04FR
DL-6702-89-01
DL-6702-89-01FR
DL-6702-89-04
DL-6702-89-04FR
DL-6703-01CL
DL-6703-01FR
DL-6703-04CL
DL-6703-04FR
DL-6703-22-01
DL-6703-22-01FR
DL-6703-22-04
DL-6703-22-04FR
DL-6703-89-01
DL-6703-89-01FR
DL-6703-89-04
DL-6703-89-04FR




SLIMLINE SHOWER BASE

SHOWER BASE DIMENSIONS AND INSTALLATION INSTRUCTIONS

IMPORTANT

DreamLine® reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the model's web page on **DreamLine.com** for the latest technical drawings, installation manuals, warranty information or additional product details.

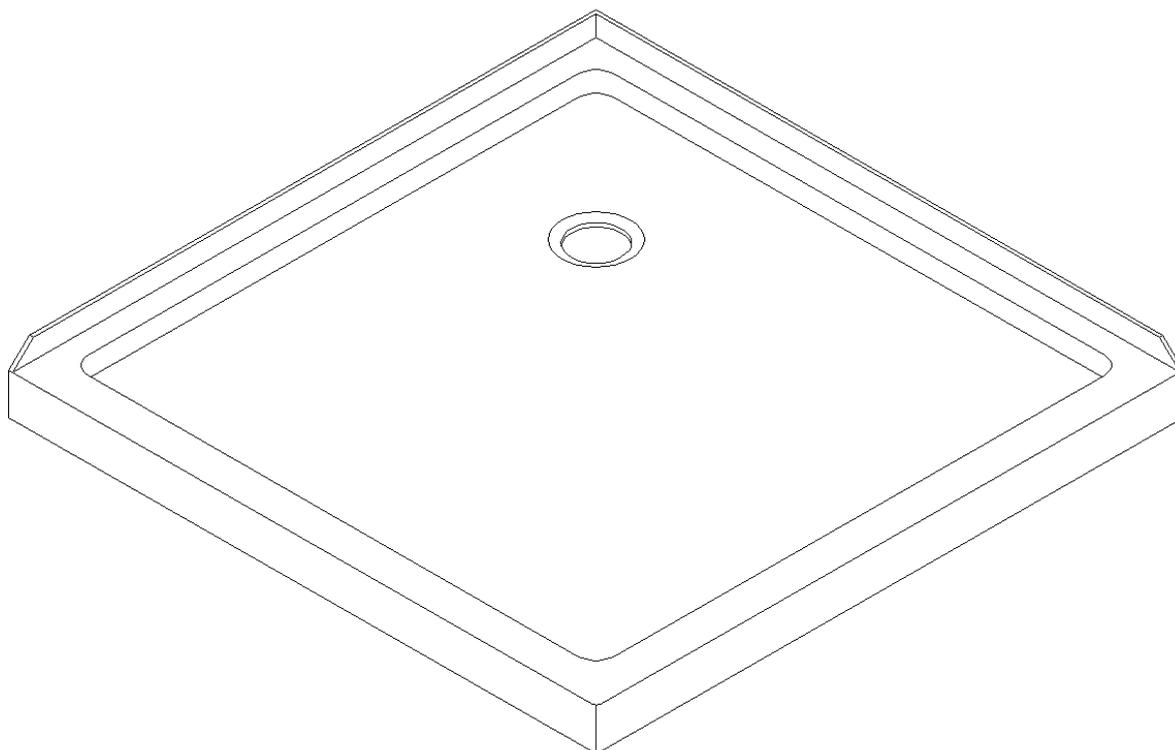

Double Threshold Shower Base with Corner Drain Configuration shown as an example

- Color options:**
--- - White
-22- Biscuit
-88- Black

Please review this entire manual before beginning installation



Questions?

Please Call **DreamLine Customer Support: 1-855-831-2126**
Hours of Operation M-F 8AM - 7PM EST and Saturday 9AM - 5PM EST

Support@DreamLine.com



For more information about DreamLine® products please visit DreamLine.com


Preparation

1. Prior to installation, examine all boxes and packages for shipping damage and compare the piece count with your packing slip. After opening all boxes and packages read this introduction carefully. Check that all of the parts are included in the package by checking off the components on the parts list. If the unit has been damaged, has a finishing defect, or has missing parts, please contact our customer support department within **3 business days** of the delivery date. Please note that **DreamLine® will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact DreamLine® if with any questions and please provide an order number, job name or other proof of purchase to help identify the original order.
2. Install all of the required plumbing and drainage before installing the shower base. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
3. **Shower bases must be installed by a licensed plumber. Please note that you should consult your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location and DreamLine® is not responsible for code compliance standards for your project.**
4. Make sure that prior to the installation the installation surface is leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. While some adjustment in leveling of the tray is possible, irregular installation surface level or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments may be necessary during the installation process.
5. **Center drain configurations are centered on the width only. See technical drawing tables for drain locations.**
6. **Drain not included with this product.** The drain opening is 3-3/8" in diameter and **accepts a standard 2" compression fitted drain.**


IMPORTANT NOTE:

Dimensions provided are for reference only. Measure the actual shower tray before installation. This includes overall dimensions and drain location. Allowed tolerance for center of the drain is +/-1/2".

Tools Required

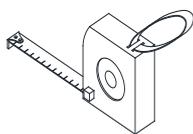

Tape
Measure



Pencil



Level





Mortar





When constructing or installing a shower base, consider how **the thickness of the wall treatment (wallboard, tile, etc.) will affect the finished opening size for the shower door.**

Compare the overall dimensions of the shower door model with the finished opening size before proceeding with the installation.

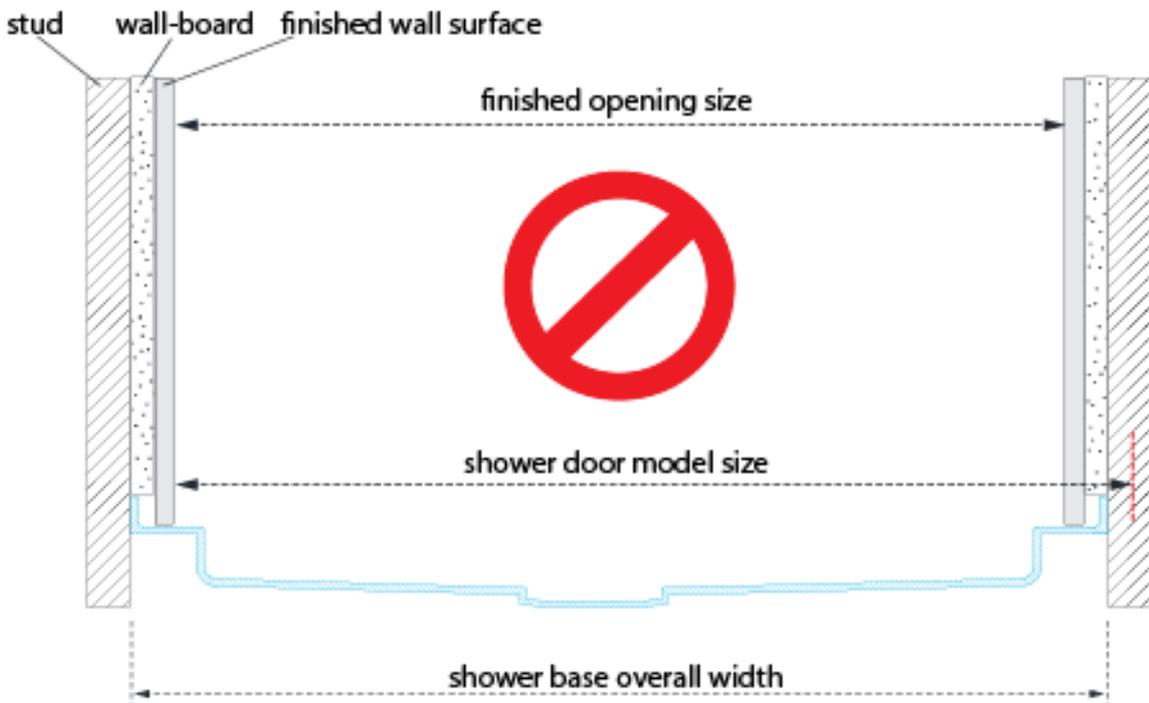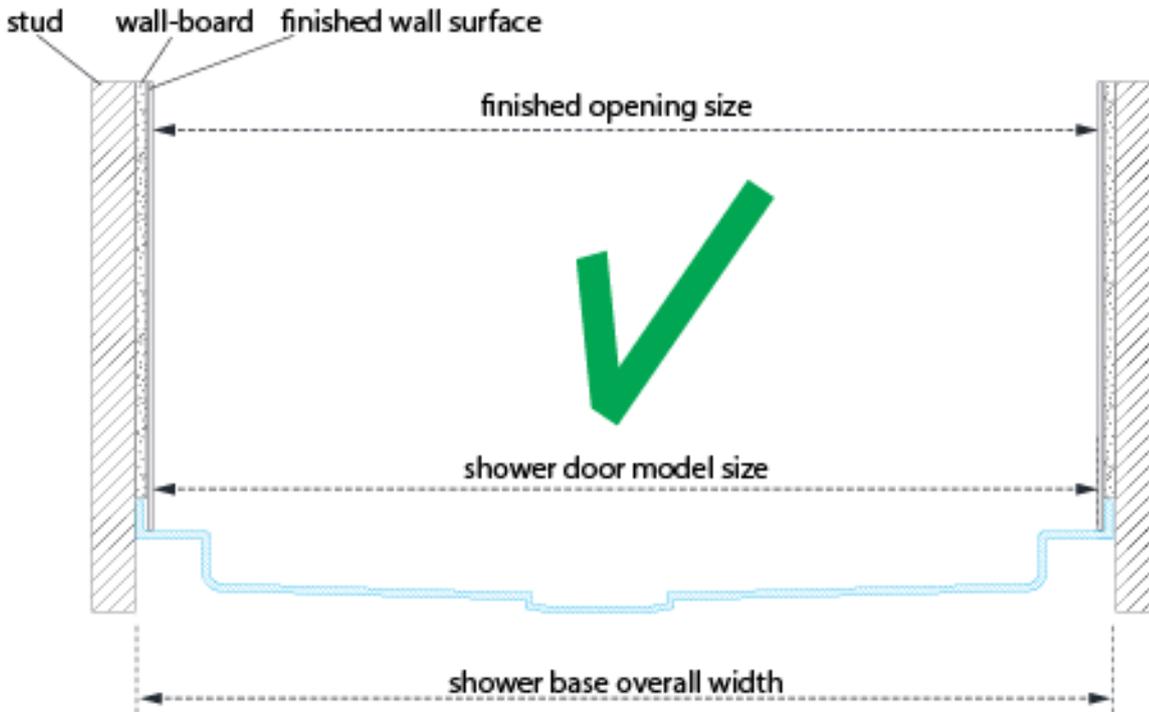





When constructing or installing a shower base, consider how **the thickness of the wall treatment (wallboard, tile, etc.) will affect where the shower enclosure will sit on the threshold.** Compare the overall outside dimensions of the shower enclosure model size with the finished threshold before proceeding with the installation.

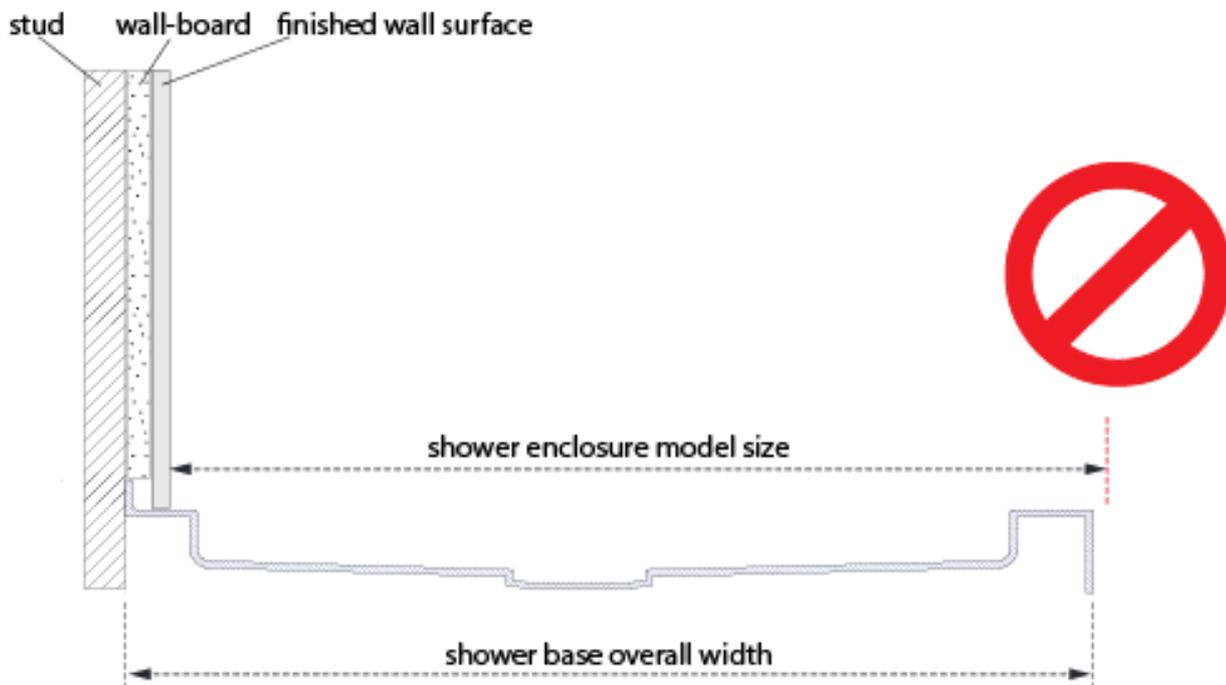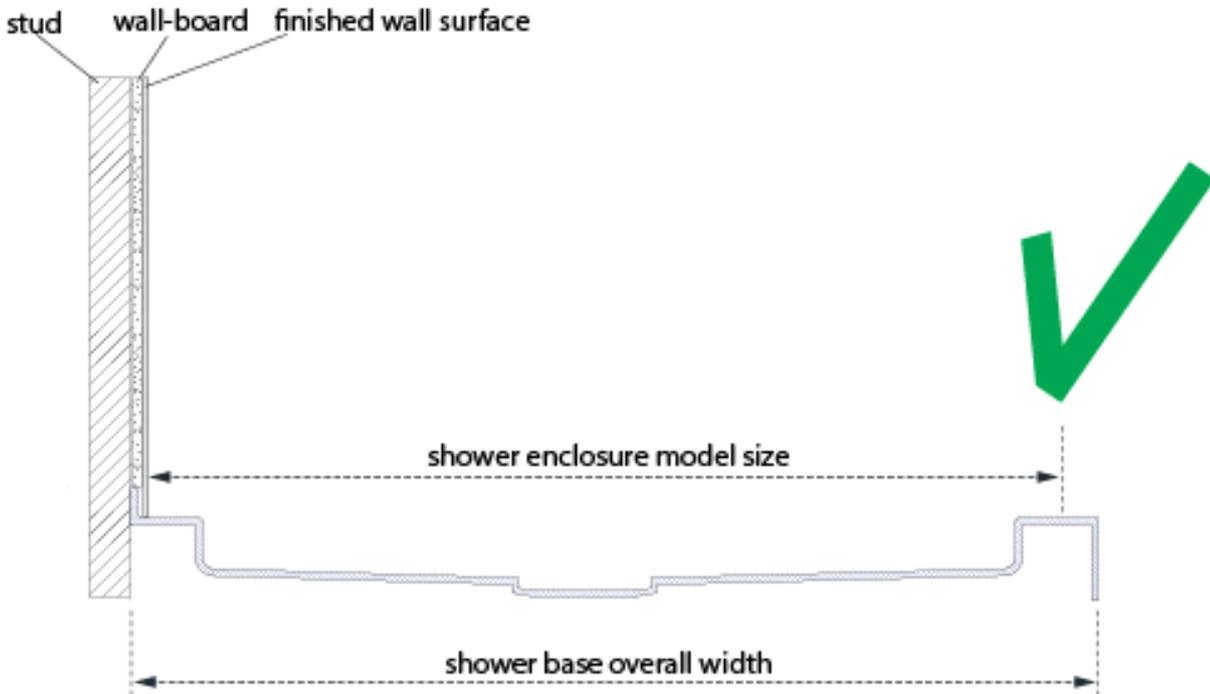

SINGLE THRESHOLD SHOWER BASE



Center Drain Configuration

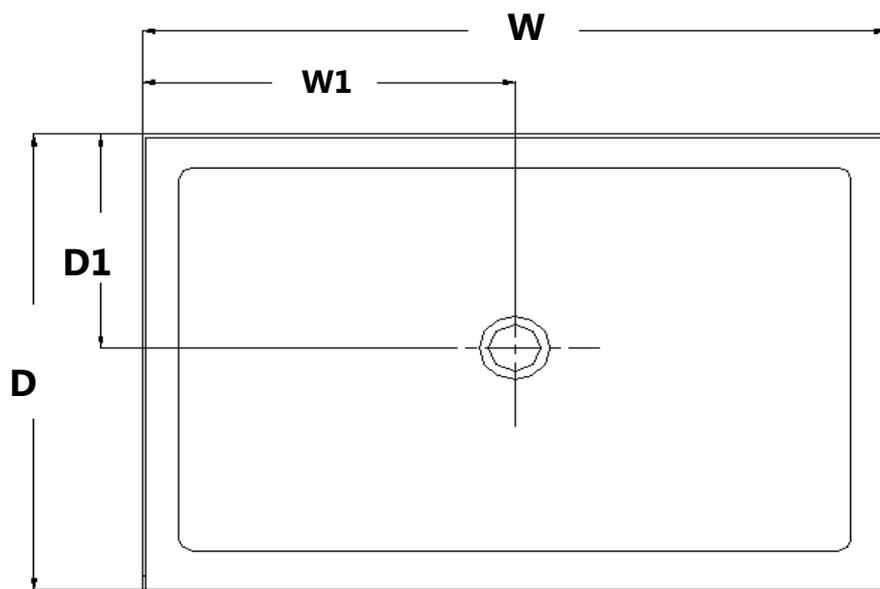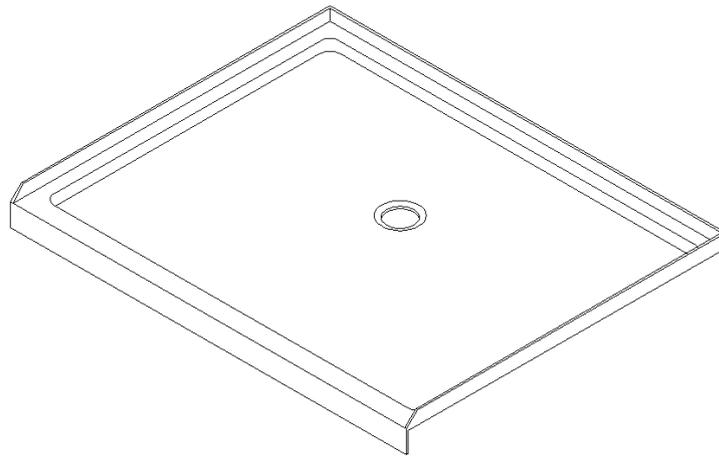

| MODEL | SPECIFICATION | D (in) | W (in) | D1 (in) | W1 (in) |
|-------------|---------------|--------|--------|---------|---------|
| DLT-1132320 | 32" x 32" | 32" | 32" | 15" | 16" |
| DLT-1136360 | 36" x 36" | 36" | 36" | 15" | 18" |
| DLT-1132420 | 32" x 42" | 32" | 42" | 15" | 21" |
| DLT-1134420 | 34" x 42" | 34" | 42" | 15" | 21" |
| DLT-1136420 | 36" x 42" | 36" | 42" | 15" | 21" |
| DLT-1142420 | 42" x 42" | 42" | 42" | 20" | 21" |
| DLT-1132480 | 32" x 48" | 32" | 48" | 15" | 24" |
| DLT-1134480 | 34" x 48" | 34" | 48" | 15" | 24" |
| DLT-1136480 | 36" x 48" | 36" | 48" | 15" | 24" |
| DLT-1132540 | 32" x 54" | 32" | 54" | 15" | 27" |
| DLT-1134540 | 34" x 54" | 34" | 54" | 15" | 27" |
| DLT-1136540 | 36" x 54" | 36" | 54" | 15" | 27" |
| DLT-1130600 | 30" x 60" | 30" | 60" | 15" | 30" |
| DLT-1132600 | 32" x 60" | 32" | 60" | 15" | 30" |
| DLT-1134600 | 34" x 60" | 34" | 60" | 15" | 30" |
| DLT-1136600 | 36" x 60" | 36" | 60" | 15" | 30" |

SINGLE THRESHOLD SHOWER BASE



Left-Hand Drain Configuration

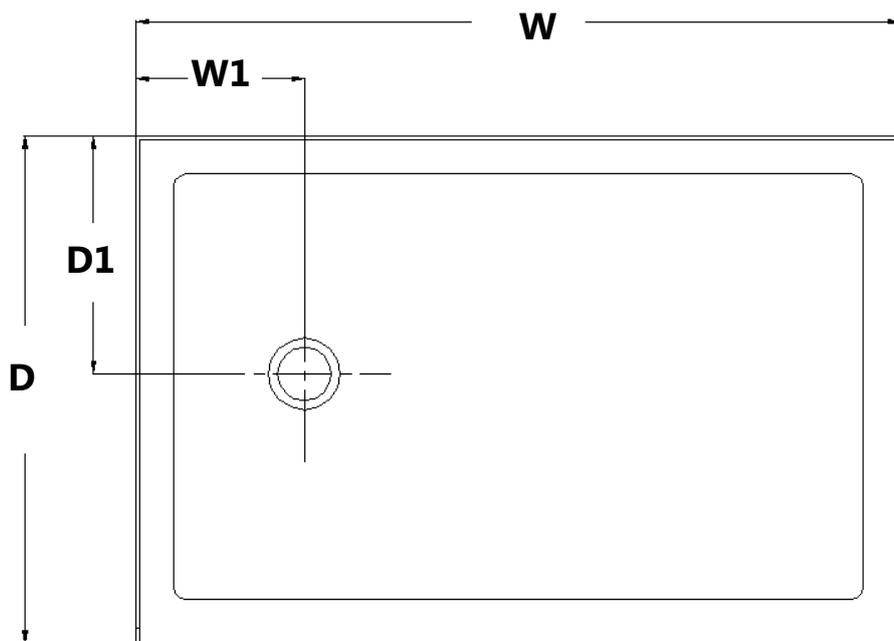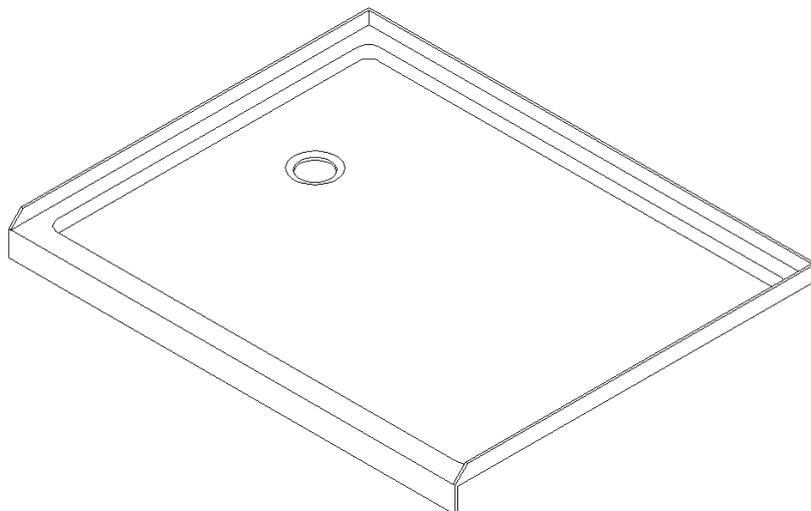

| MODEL | SPECIFICATION | D (in) | W (in) | D1 (in) | W1 (in) |
|-------------|---------------|--------|--------|---------|---------|
| DLT-1130601 | 30"×60" | 30" | 60" | 15" | 12" |
| DLT-1132601 | 32"×60" | 32" | 60" | 15" | 12" |
| DLT-1134601 | 34"×60" | 34" | 60" | 17" | 12" |
| DLT-1136601 | 36"×60" | 36" | 60" | 18" | 12" |



SINGLE THRESHOLD SHOWER BASE

Right-Hand Drain Configuration

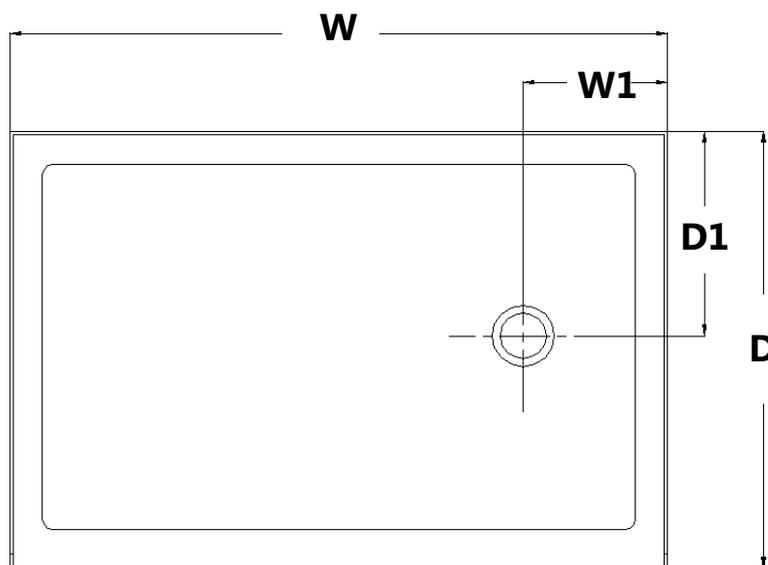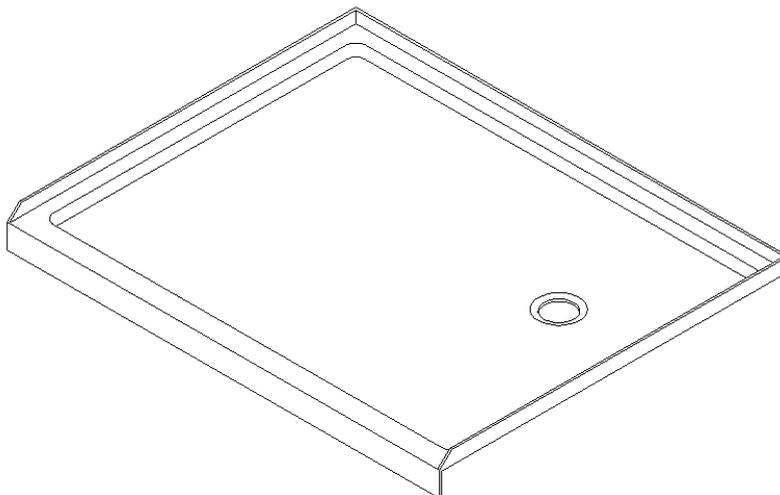

| MODEL | SPECIFICATION | D (in) | W (in) | D1 (in) | W1 (in) |
|-------------|---------------|--------|--------|---------|---------|
| DLT-1130602 | 30"×60" | 30" | 60" | 15" | 12" |
| DLT-1132602 | 32"×60" | 32" | 60" | 15" | 12" |
| DLT-1134602 | 34"×60" | 34" | 60" | 17" | 12" |
| DLT-1136602 | 36"×60" | 36" | 60" | 18" | 12" |

NEO ANGLE SHOWER BASE

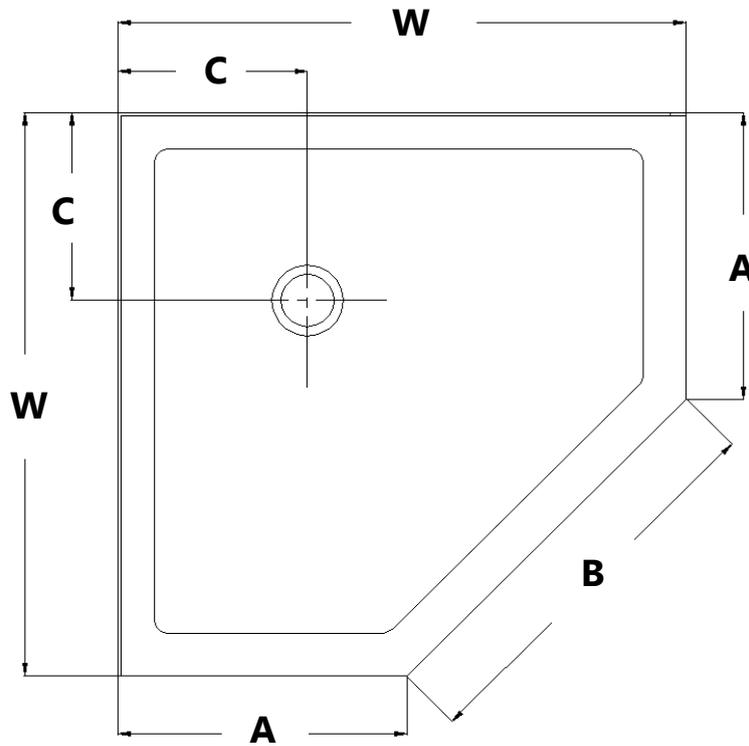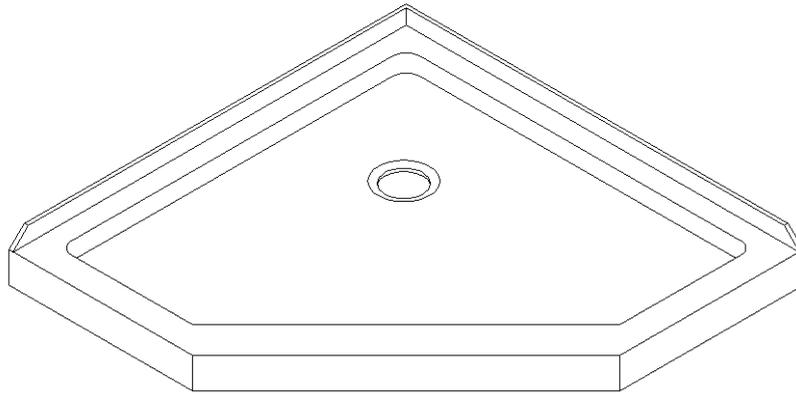

| MODEL | SPECIFICATION | W (in) | A (in) | B (in) | C (in) |
|-------------|---------------|--------|----------|--------|---------|
| DLT-2036360 | 36"×36" | 36" | 18 5/16" | 25" | 12" |
| DLT-2038380 | 38"×38" | 38" | 20 5/16" | 25" | 12" |
| DLT-2040400 | 40"×40" | 40" | 22 5/16" | 25" | 14 3/8" |
| DLT-2042420 | 42"×42" | 42" | 24 5/16" | 25" | 14 3/8" |