



**DEKORRA®**  
ROCK ENCLOSURES

**Model 109**

Listed Dimensions:  
30" L x 23" W x 18" H

**Front View**



18"



23"



23"

**Top View**

Suggested concrete pad 20" x 19"



**IDEAL CONCEALING APPLICATIONS:**

- Small Residential Pump Systems or Backflow Devices
- Irrigation Valve Box Lids and Vaults
- Septic Aeration Pumps or Compressors
- Well and Septic Pipes up to 12" in Height

**Sample Interior Spacing**

Height	Length	Width
2"	22"	12"
6"	16"	12"
12"	12"	6"

**Diameter Sizing**

Height	Diameter
2"	20" Dia
9"	11" Dia
14"	5" Dia


**DEKORRA ENCLOSURE FEATURES AND BENEFITS:**

- Realrock™ material provides the realistic rock features
- Commercial grade construction stands up to elements
- Lightweight, easy to move and incredible durable
- Rocks will not fade in sun or crack in cold weather
- Rocks designed to conceal existing utility devices

Dekorrra Rocks do taper in length and width as height increases. Any concerns in sizing for a specific item can be discussed with a Dekorrra Customer Service Rep at 888-635-8585, [sizeofrock@dekorrraproducts.com](mailto:sizeofrock@dekorrraproducts.com) along with a photo of the specific application and dimensions.



### DEKORRA ROCK COLOR OPTIONS:

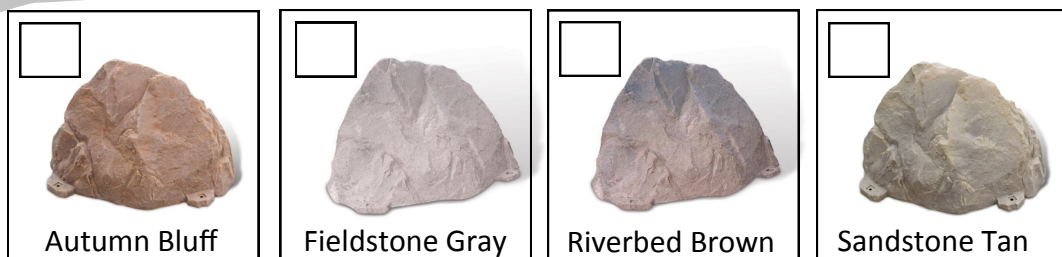

### RECOMMENDED INSULATED POUCH

605-DT 16" L x 15" H  
609-DT 24" L x 16" H

### DEKORRA AVAILABLE OPTIONS:



### INSTALLATION INSTRUCTIONS:

1. If heat is required, installations will require GFI protected power mounted at least 6" above all water discharge ports or per local code regulations.
2. If concrete base is required. Pour concrete pad per measurements provided. If mounting to ground, level area where enclosure is to be installed.
3. If installation requires self regulated heat tape, install per instructions securing to piping and valve. Place insulated pouch over valve and piping assembly.
4. Place rock over device. Verify that rock does not interfere with device. Insert included stakes for soil installation. For concrete installations see optional concrete installation instructions.

### CONCRETE ANCHOR INSTALLATIONS

1. Drill hole with same diameter as anchor of sufficient depth. Clean drilled hole of dust and debris.
2. Place washer and nut onto threaded anchor as required.
3. With nut, washer and set pin in place insert anchor through rock flange column and into concrete base.
4. Using a proper size hammer set pin with several sharp and square strikes on head of pin until pin is flush with top of threaded anchor.

