




# **Type L Biomass Chimney**

For use with biomass fuels such as pellet, corn, wheat or other grassy and woody plants as specified by appliance manufacturers.

- Tested and Listed to UL 641.
- Pipe and fittings in 3" and 4" diameters.
- Factory-built double wall construction, using 430 stainless steel flue and galvanized steel outer casing.
- Positive twist lock for easy assembly and disassembly without tools and without damage.
- Rope gaskets at each joint to prevent fly ash leakage.

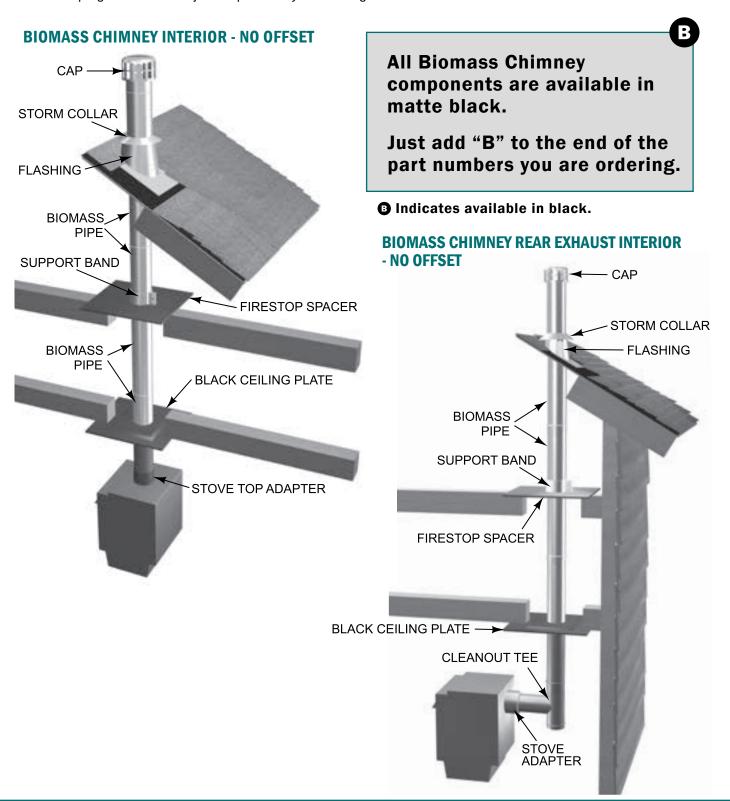

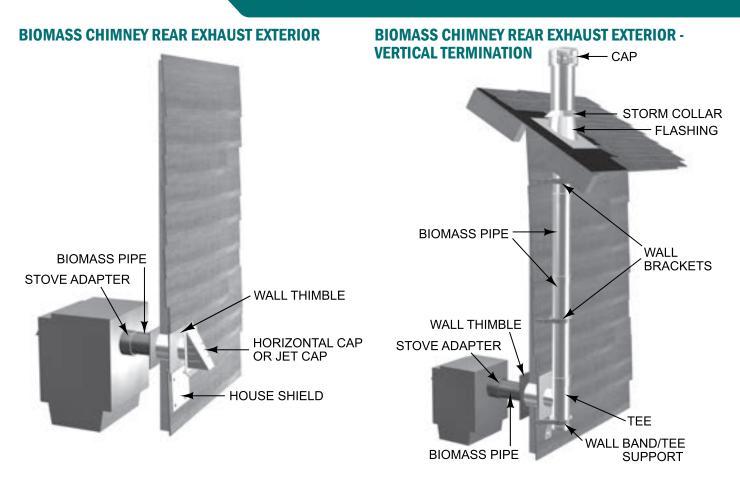

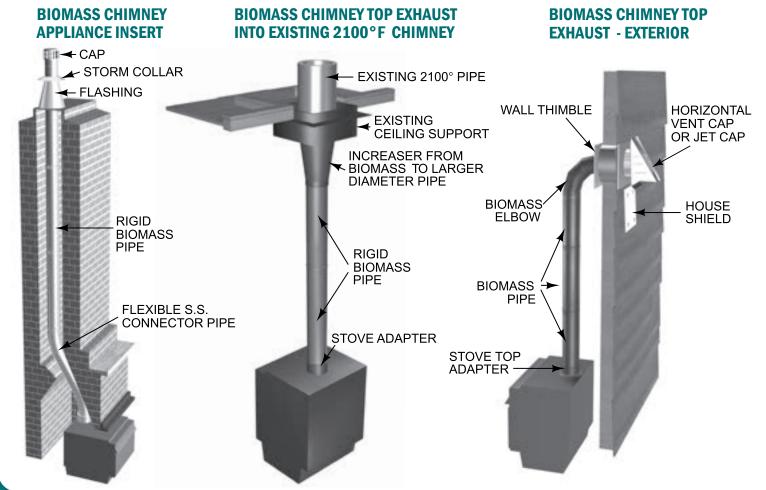

# **RIGID PIPE LENGTHS - P48, P36, P24, P12, P6**





Stainless liner. Galvanized casing. 3" clearance to combustibles.

SIZE	I.D.	6"	12"	24"	36"	48"
3"	3.00"	Х	Х	Х	Х	Х
4"	4.00"	Х	Х	Х	Х	Х

### **ADJUSTABLE LENGTH PIPE - P12A**



Adjustable length P12A is used when fixed pipe lengths are inappropriate. Adjustable from 4" to 8". Available in 3" and 4" diameters.



### S.S FLEXIBLE CONNECTOR - PFXC



5' Flexible connector length, with end fittings. Available in 3" and 4" diameters.

### 25' S.S FLEX COIL - SLX




3" and 4" diameter x 25' coils of 316L acid resistant stainless steel. Easily handled, and very flexible.

### **TRIM SLEEVE - PTS**








Used at any pipe joint to enhance appearance and reduce joint leakage.

# **MALE FLEX ADAPTER - P4A**








**Enables transition** from flex to rigid pipe. Available in 3" and 4" diameters.

### **FEMALE FLEX ADAPTER - P4FA**









from appliance or rigid pipe to flex pipe. Available in 3" and 4" diameters.


### **STANDARD STOVE ADAPTER - PSA**

**3** 











# **PSAU** A = 3.00" length B = 3.00" or 4.00" I.D.


Used as a connector between stove exhaust collar and the positive twist lock of biomass chimney pipe. Order PSA when O.D. of exhaust collar is a true 3" or 4" dimension. Order PSAU when collar is less than 3" or 4" diameter.

# **UNIVERSAL STOVE ADAPTER - PSAU**

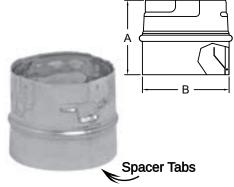

# 45° ELBOW - P45



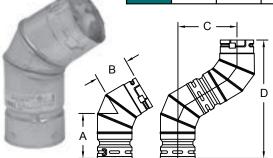

Used to obtain lateral movement around obstructions or to angle the biomasschimney towards the wall thimble. Elbows are factory sealed and are non-adjustable.

from horizontal to vertical inside or to an exterior chimney that is mounted to a

tee support.


# 90° ELBOW - P90

0


 SIZE
 A
 B
 C
 D

 3"
 5.50"
 5.75"
 11.75"
 13.25"

 4"
 6.40"
 6.50"
 12.13"
 13.63"

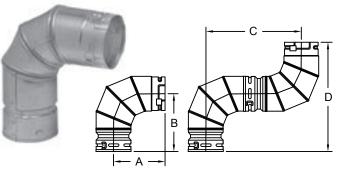


# STANDARD TEE W/PULL-OFF CAP - PT

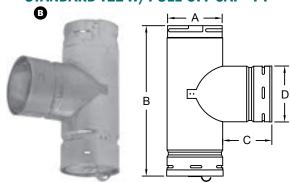


SIZE	Α	В	С	D
3" x 3"	3.50"	9.13"	3.00"	3.50"
4" x 4"	4.50"	10.13"	3.00"	4.50"

# **REDUCED TAP TEE W/PULL-OFF CAP - 4PT3**

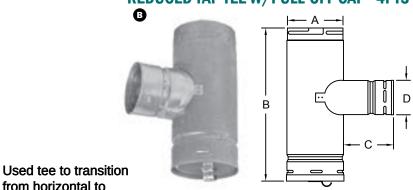

SIZE	Α	В	С	D
4" x 3"	4.50"	10.13"	3.00"	3.50"

# **REDUCED TAP TEE W/ADAPTER - 4PT3A**

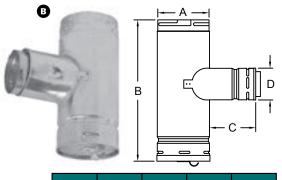


SIZE	Α	В	С	D
4" x 3"	4.50"	10.13"	3.00"	3.50"

# **FLEX TEE - 3PFLXT AND 4PFLXT3**



Connects appliance to stainless steel pellet flex pipe.

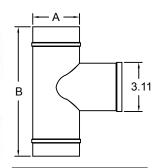


SIZE	A	В
3"	3.11"	8.75"
4"	4.11"	9.75"

### **STANDARD TEE CAP - PTC**



# **TWIST-OFF TEE CAP - PCTC**






This part number applies when tee cap is sold separately.

Note: Pipe overlaps 1½" when joined together. Assembled length is 1½" less than listed length.

# HORIZONTAL CLEANOUT TEE W/TWIST-OFF TEE CAP - PCT

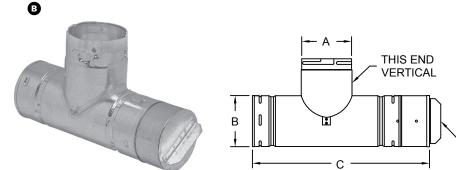


SIZE	Α	В	С
3"	3.50"	3.50"	11.00"
4"	4.50"	4.50"	14.12"

TWIST-OFF CLEANOUT CAP


# **VERTICAL CLEANOUT TEE W/TWIST-OFF TEE CAP - PVCT**



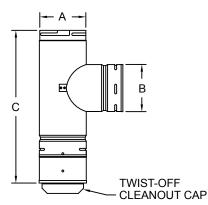


SIZE	Α	В	С
3"	3.50"	3.50"	11.00"
4"	4.50"	4.50"	14.12"

# **COMBINATION WALL BAND/TEE SUPPORT - PWBS**

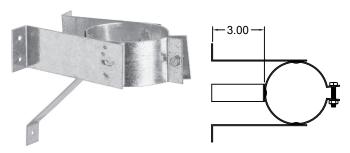

Provides exterior, vertical/lateral support for chimney. Maxiumum height of chimney which can be supported is 30 feet.

### **SUPPORT ADJUSTMENT KIT - PWAS**

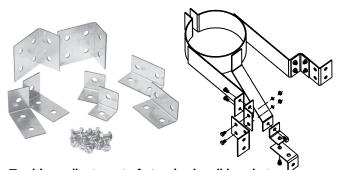


Enables adjustment of standard wall bracket (PWBS) from minimum 3" to maximum 5".

# WALL BRACKET - PWB 3.00


Used to provide lateral support while maintaining proper clearance. Recommended spacing is 6ft. between bands above the starting point.


### **WALL BRACKET ADJUSTMENT KIT - PWBA**

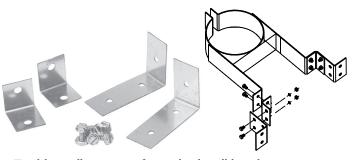

Enables adjustment of standard wall bracket (PWB) from minimum 3" to maximum 5".

### **WALL THIMBLE - PWT**

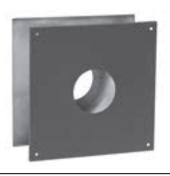

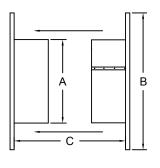


SIZE	Α	В	С
3"	6.13"	13.00"	5.00" TO 9.50"
4"	7.13"	13.00"	5.00" TO 9.50"

Provides the proper clearance for the pellet/corn pipe when it passes through a combustible wall.

### **HOUSE SHIELD - PRS**



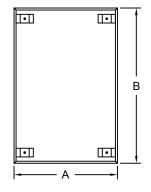


SIZE	Α	В
3"	12.00"	18.00"
4"	12.00"	18.00"

Used in horizontal vent applications to provide extra protection from discharge. When ordering specify part number-PHS for 3" and 4" diameters.

# **ROOF SUPPORT - PRS**




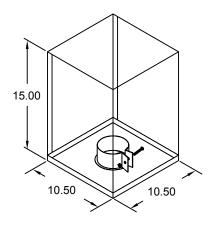

For use on open beamed pitched roofs or ceilings. Includes trim pieces for finishing out installation. Also includes support band.

### **BLACK CEILING PLATE - PCP**



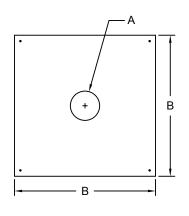


SIZE	Α	В
3"	3.63"	17.50"
4"	4.63"	17.50"

Used as an exposed surface trim piece where biomass chimney passes through a floor or ceiling.

### **FIRESTOP SPACER - PFS**



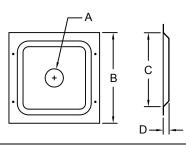


SIZE	Α	В	С	D
3"	3.56"	13.00"	17.50"	1.00"
4"	4.56"	13.00"	17.50"	1.00"

Provides proper clearance where biomass chimney passes through a floor or the ceiling. Serves as a support plate for the support band (sold seperately).

**SUPPORT BAND - PSB** 



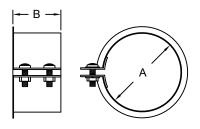


SIZE	Α	В
3"	3.63"	1.50"
4"	4.63"	1.50"

Used to support the biomass chimney as it passes through the firestop spacer or roof support. This piece typically sits on top of the firestop spacer or inside the roof support.

**VERTICAL VENT CAP -PRC** 



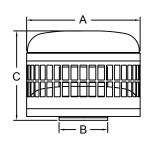



SIZE	Α	В	С
3"	8.25"	3.00"	6.75"
4"	8.25"	4.00"	6.75"

Stainless steel cap guards against rain, snow, and down drafts. Helps provide proper venting action. Attractive design and enhances appearance.

### **HORIZONTAL VENT CAP - PHC**








SIZE	Α	В	С
3"	3.50"	7.00"	10.00"
4"	4.50"	7.00"	10.00"

Stainless steel cap prevents entrance of rain and directs flue gases away from house.

**HORIZONTAL JET CAP - PJC** 







SIZE	Α	В
3"	3.00"	5.25"
4"	3.00"	5.25"

### **STANDARD FLASHING - PF**


SIZE	Α	В	PLATE SIZE
3"	3.63"	7.50"	14.63" x 14.63"
4"	4.63"	7.50"	14.63" x 14.63"

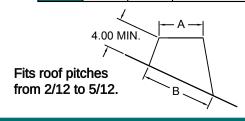




# **HIGH PITCH FLASHING - PF-12**


SIZE	Α	В	PLATE SIZE
3"	3.69"	12.00"	20.00" x 20.00"
4"	4.69"	12.00"	20.00" x 20.00"



Fits roof pitches from 6/12 to 12/12.

### **TALL CONE FLASHING - PFT**

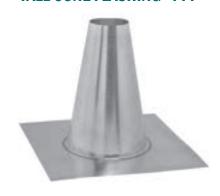


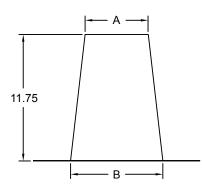

SIZE	Α	В	PLATE SIZE
3"	3.60"	7.50"	14.63" x 14.63"
4"	4.60"	7.50"	14.63" x 14.63"


Fits roof pitches from 0/12 to 2/12.

### **STORM COLLAR - PSC**

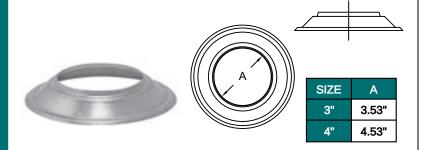

# 3" to 4" INCREASER - 3PI4



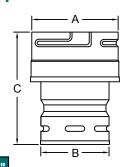


A = 4.00" B = 3.00" B = 5.53"

Provides transition from 3" to 4" diameter pipe.

# **INCREASERS TO TEMP/GUARD - P6SWA AND P8SWA**



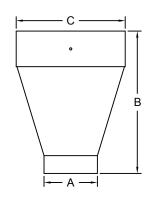

SIZE	Α	В	С
3P6SWA	3.00"	8.00"	6.13"
4P6SWA	4.00"	8.00"	6.13"
4P8SWA	4.00"	8.00"	8.13"

### **VERTICAL INSTALLATION KIT - 3PVK**



Available in 3" only. Includes:

- Vertical Cap
- Standard Tee
- 12" Adjustable Length
- Stove Adapter-Standard
- Wall Thimble
- Wall Band/Tee Support
- 2 Wall Bands

### **HORIZONTAL INSTALLATION KIT - 3PHK**



Available in 3" only. Includes:

- Horizontal Cap
- Standard Tee
- 90 Degree Elbow
- Stove Adapter-Standard
- Wall Thimble
- Wall Band

Note: Pipe overlaps 1½" when joined together. Therefore, assembled length is 1½" less than listed length.

**Metal-Fab Type "L" Vent** is tested and listed to UL 641 for venting high efficiency oil appliances with maximum flue temperatures of 570°F. Double wall construction includes a galvanized exterior jacket, with a stainless inner liner. Available in diameters of 4", 5" and 6". May be used as a connector or as a complete system on oil appliances that are listed as suitable for use with Type "L" Vent.

### **RIGID PIPE LENGTHS - P48, P36, P24, P12**

\* PS36 & PS48 (5" & 6" only)






Stainless Liner. Galvanized casing. \* Stainless liner. Stainless casing.

SIZE	I.D.	12"	24"	36"	48"
4"	4.00"	X	Х	X	Х
5"	5.00"	Х	Х	Х	Х
6"	6.00"	Х	Х	Х	Х

Adjustable length P12A is used when fixed pipe lengths are inappropriate. Adjustable from 4" to 8".


Diameters 4", 5", 6"





### **APPLIANCE ADAPTER - PSA**






PSA
A = 5.00" length
B = 4.00", 5.00" & 6.00" I.D.

Use as a connector between appliance exhaust collar and the positive twist lock of "L" Vent pipe.

### **VERTICAL VENT CAP - PRC**




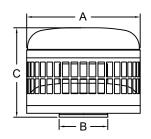

SIZE	Α	В	C
5"	10.00"	5.50"	6.50"
6"	12.00"	6.50"	6.50"

Stainless steel cap guards against rain, snow, and down drafts. Helps provide proper venting action.


# 45° ELBOW - P45 ADJ. IN 5" & 6" FIXED IN 4"

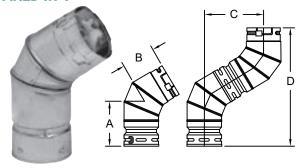


SIZE	Α	В	С	D
4"	4.50"	3.80"	5.75"	15.37"
5"	5.92"	4.96"	6.63"	17.51"
6"	6.63"	4.02"	6.47"	17.12"

Used to obtain lateral movement around obstructions or to angle the "L" Vent pipe towards the wall thimble.

# 90° ELBOW - P90 ADJ. IN 5" & 6" FIXED IN 4"

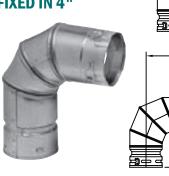


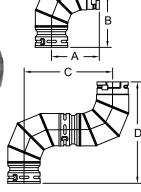

SIZE	Α	В	С	D
4"	6.40"	6.50"	12.13"	13.63"
5"	6.17"	6.50"	10.84"	13.90"
6"	5.60"	6.95"	9.70"	13.90"

# STANDARD TEE W/PULL-OFF TEE CAP - PT



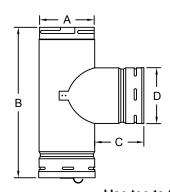

SIZE	Α	В	С	D
4"	4.50"	10.13"	3.00"	4.50"
5"	5.50"	11.13"	3.00"	5.50"
6"	6.50"	12.13"	3.00"	6.50"


Use tee to transition from horizontal to vertical inside or to an exterior chimney that is mounted to a tee support.


### **STANDARD TEE CAP - PTC**



This part number applies when tee cap is sold separately.

# **COMBINATION WALL BAND/TEE SUPPORT - PWBS**

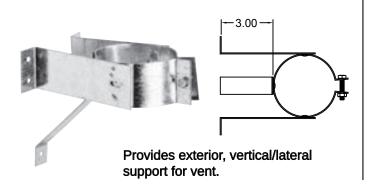


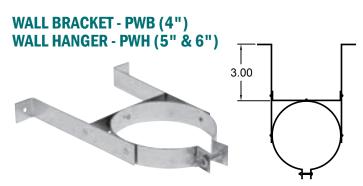

Used to provide lateral support while maintaining proper clearance. Recommended spacing is 6ft. between bands above the starting point.

### **FIRESTOP SPACER - PFS**



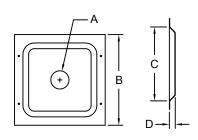


SIZE	Α	В	С	D
4"	4.56"	13.00"	17.37"	1.00"
5"	5.56"	13.00"	17.37"	1.00"
6"	6.56"	13.00"	17.37"	1.00"

Provides proper clearance where biomass chimney passes through a floor or the ceiling. Serves as a support plate for the support band (sold separately).

### **SUPPORT BAND - PSB**



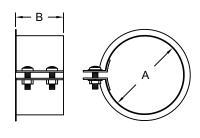


SIZE	Α	В
4"	4.56"	1.75"
5"	5.56"	1.75"
6"	6.56"	1.75"

Used to support the "L" Vent pipe as it passes through the firestop spacer. This piece typically sits on top of the firestop spacer.

### STANDARD STAINLESS FLASHING - PSF

SIZE	Α	В	PLATE SIZE
5"	5.63"	8.25"	14.63" x 14.63"
6"	6.63"	9.50"	17.50" x 17.50"




### **HIGH PITCH STAINLESS FLASHING - PSF-12**

S	SIZE	Α	В	PLATE SIZE
	5"	5.69"	12.00"	20.00" x 20.00"
	6"	6.75"	12.50"	21.00" x 28.00"



## TALL CONE STAINLESS FLASHING - PSFT




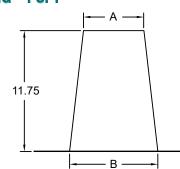

SIZE	Α	В	PLATE SIZE
5"	5.60"	8.25"	14.63" x 14.63"
6"	6.60"	9.50"	17.00" x 17.00"

Fits roof pitches from 0/12 to 2/12


### STAINLESS STORM COLLAR - PSSC

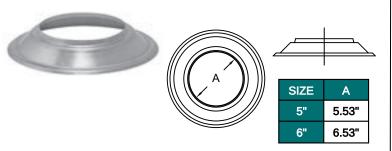

Used in combination with the flashing to ensure watertight installation. Slips around pipe above the flashing.

# 4" TO 5" INCREASER - 4PI5 **5" TO 6" INCREASER - 5PI6**



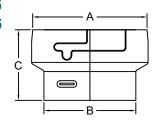


SIZE	Α	В	C
4" TO 5"	5.50"	4.50"	2.68"
5" TO 6"	6.50"	5.50"	2.68"

Provides transition to larger diameter pipe.

### **WALL THIMBLE - PWT**



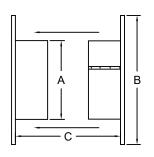

SIZE	Α	В	С
4"	7.00"	13.00"	5.00" TO 9.50"
5"	8.00"	13.00"	5.00" TO 9.50"
6"	9.00"	13.00"	5.00" TO 9.50"

Provides the proper clearance for the "L" Vent pipe when it passes through a combustible wall.



800-835-2830