
Owners Manual

Model 4420DB Bi-Level Tubular Fountain with Pet Fountain

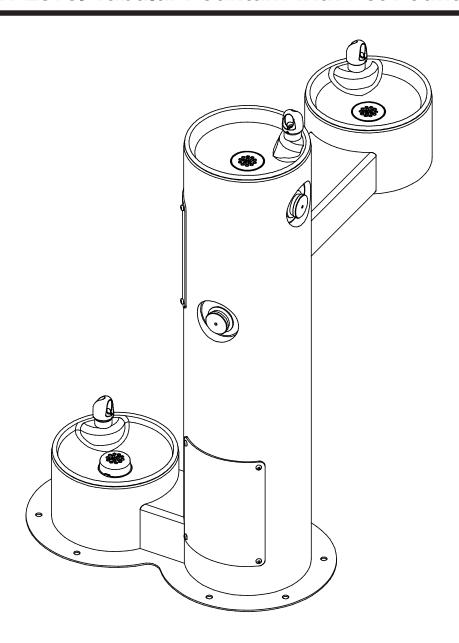

INSTALLER

4420DB Fountains are among the easiest to install Fountains on the market today. To assure you install these models easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL, AND OTHER APPLICABLE CODES. After installation, leave these instructions with the Fountain for future reference.

4420DB_FTN_A LK4420DB_FTN_A

INSTALLATION INSTRUCTIONS

IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON


IMPORTANT! INSTALLER PLEASE NOTE.


THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE, COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN, CREATING AN ELECTROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM.

- 1. This fountain is to be mounted on a smooth, flat, finished surface with adequate support structure. NOTE: Mounting structure must be capable of supporting 300 lb. load on fountain.
- 2. Refer to rough-in for plumbing.
- 3. Install shut-off valve on water supply. (Valve not furnished)
- 4. Locate and install fountain using 3/8" minimum fasteners. (Fasteners not furnished)
- 5. Connect water supply and fountain drain. Connect drain waste "Tee" to fountain drain tubes. Connect outlet of "Tee" to drainage system. Water connection and drain must comply with local codes.
- 6. Turn on water supply and check all connections for leaks.

CAUTION: This fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressures lower than 20 PSI or higher than 105 PSI is not covered by warranty.

- 7. Water supply 3/8" O.D. unplated copper tube. Waste 1-1/2" IPS. Contractor to supply waste trap and service stop valve in accordance with local code.
- 8. Connecting lines to be made of unplated copper and should be thoroughly flushed to remove all foreign matter before being connected to fountain. This fountain is manufactured in such a manner that it does not in any way cause taste, odor, color, or sediment problems.
- 9. Connect fountain to supply line with a shut-off valve and install a 3/8" unplated copper water line between the valve and the fountain. Remove any burrs from outside of water line. Push the tubes straight into the fittings until they reach a positive stop, approximately 3/4" (See Fig. 2). DO NOT SOLDER TUBES INSERTED INTO THE STRAINER AS DAMAGE TO THE O-RINGS MAY RESULT.

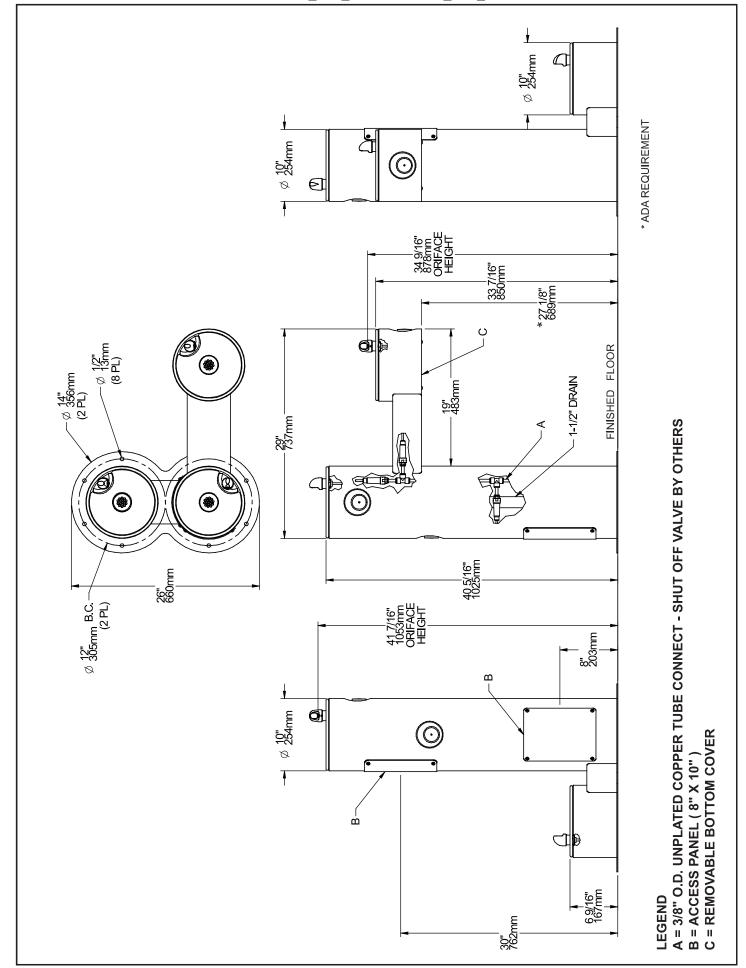


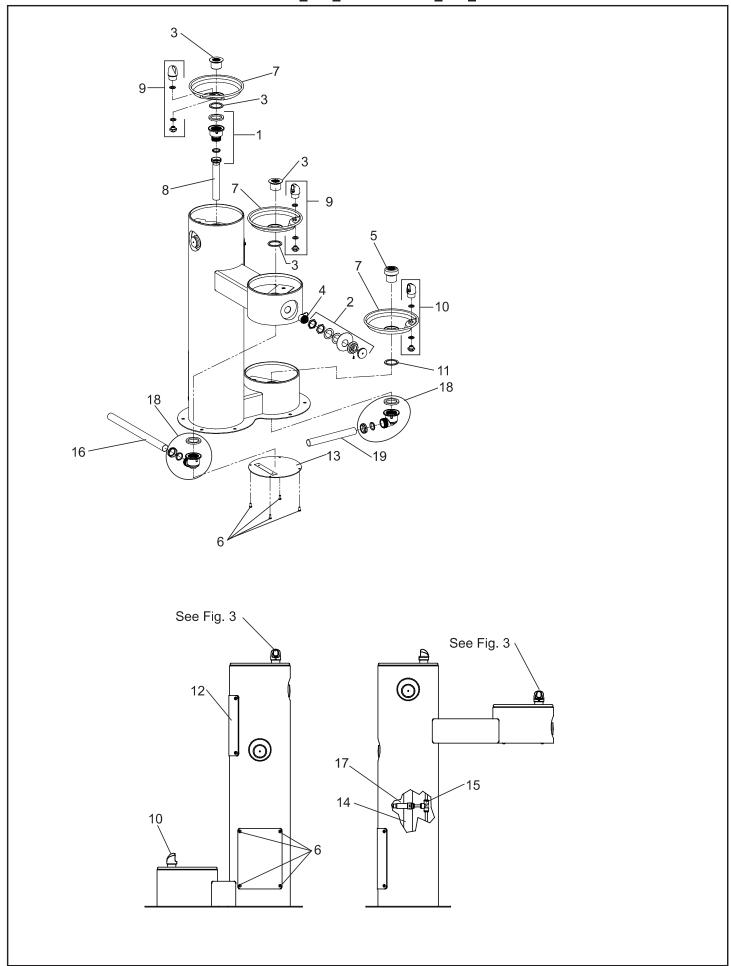



TROUBLE SHOOTING AND MAINTENANCE


ACTUATION OF QUICK CONNECT WATER FITTINGS:

Fountain is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing. (see Fig.2) To insert tubing, push tube straight into fitting until it reaches a positive stop, approximately 3/4".

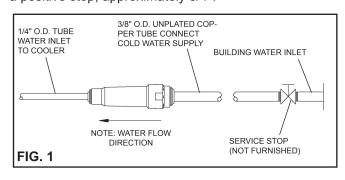

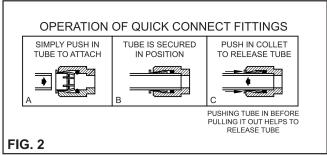

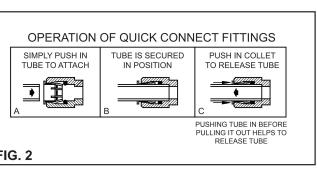

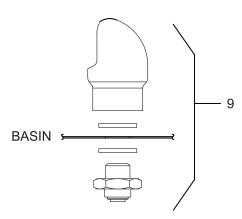


Vandal-Resistant Bubbler FIG. 3

*FINISH COLOR OPTIONS - Choose color option to complete your model number, add as suffix example: 4420DB**EVG**

Matte finish: ☐ Everg	green = EVG	
Gloss finish:		
☐ Beige = BGE	☐ Gray = GRY	☐ Terracotta = TER
☐ Black = BLK	☐ Orange = ORN	☐ White = WHT
$\prod Rlue = RLH$	□ Purple = PHP	$\square \vee \square \vee$

☐ Red = **RED**

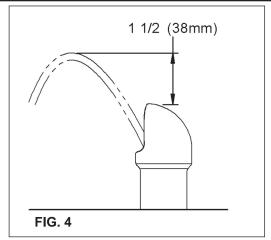

STREAM HEIGHT ADJUSTMENT:

Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, insert a small straight bladed screwdriver through the access hole in the center of the push button and turn the adjustment screw. Clockwise adjustment will raise the stream and counterclockwise adjustment will lower the stream. For best adjustment, the stream should be approximately 1 1/2" above the top of the bubbler . (See Fig. 4)

ITEMIZED PARTS LIST

	ITEM	PART NO.	DESCRIPTION	
	NO.			
	1	98683C	Kit - Drain Adapter/Gasket/Nut/Washer	
	2	98682C	Kit - Push Button w/Blank Nameplate	
		1000003694	Kit - Push Button w/LK4420DB Nameplate	
		1000003695	Kit - Push Button w/4420DB Nameplate	
	3	0000000325	Kit - Drain Plug & Gasket	
	4	98530C	Kit - Regulator/Holder/Nut	
	5	45726C	Plug - Drain	
	6 7	97247C	Kit - VR Torx Screws/Bit	
		28467C	Basin	
	8	40551C	Tailpipe	
	9	97446C	Kit-Bubbler (VR)	
	10	0000000466	Kit - Bubbler (Dog Bowl)	
	11	101570540560	Gasket	
	12	1000003812*	Access Panel	
	13	1000003813*	Bottom Cover	
	14	45926C	Drain Tube	
	15	70852C	Tee - 3/8"	
	16	66346C	Drain Tube	
	17	55996C	In - Line Strainer	
	18	98684C	Kit - Drain Elbow/Nut/Washer/Gasket	
	19	45724C	Tailpipe - 10" Lg.	
	NS	1000003490	Tube - Drain	
	NS	56092C	Tubing-1/4" Poly (Cut To Length)	

NS = Not Shown

*select color option to complete part number

☐ Brown = **BRN**

Halsey Taylor – halseytaylor.com FOR PARTS CONTACT YOUR LOCAL DISTRIBUTOR OR CALL TECHNICAL SERVICES AT 1.800.834.4816 Elkay - elkay.com 2222 CAMDEN COURT, OAK BROOK, ILLINOIS 60523