



ENGINEERING EXCELLENCE

Installation Guide

Handheld Showerset:

- 6DM820
- 6DM920
- 6CB820
- 6PR820
- 6BL820

This product meets the following standards:

- ASME A112.18.1
- ANSI A117.1

Thank you for purchasing this pioneer quality product.

Tools Required

				
Adjustable Wrench	Teflon Tape	Plumbers Putty	3/32" Allen Wrench	


Prior to Installation

- Observe all local plumbing and building codes before you begin installation.
- Carefully shut off both hot and cold water supplies.
- Plug the tub drain with a soft cloth to prevent intrusion of debris or the loss of any parts.
- Pioneer reserves the right to make changes in the design of faucets without notice.

Handheld Showerset Installation


1. Install adapter(B) to the roman tub spout shank. Ensure the washer(A) is in the adapter(B).
2. Thread locknut(E) on the diverter valve(F). Slide steel washer(D), rubber washer(C) on the diverter valve. slide diverter valve (F) to the mounting hole from the underneath of the finished mounting surface.
3. Place the rubber washer (C) and steel washer(D) from the top. Thread the locknut(E) to the diverter (F).
4. Ensure there is 1-3/4" from the finished mounting surface to the diverter stem. Install the handle (G) either by screwing on the diverter valve(F) or tightening 3/32" allen screw from the side.
5. Place the showerhead holder (H).
6. Place the rubber washer(C) and steel washer(D) from the bottom. Thread the locknut(E) to the showerhead holder(H) from bottom.
7. Place the handheld showerhead on the showerhead holder(H).

Handheld Showerset Installation

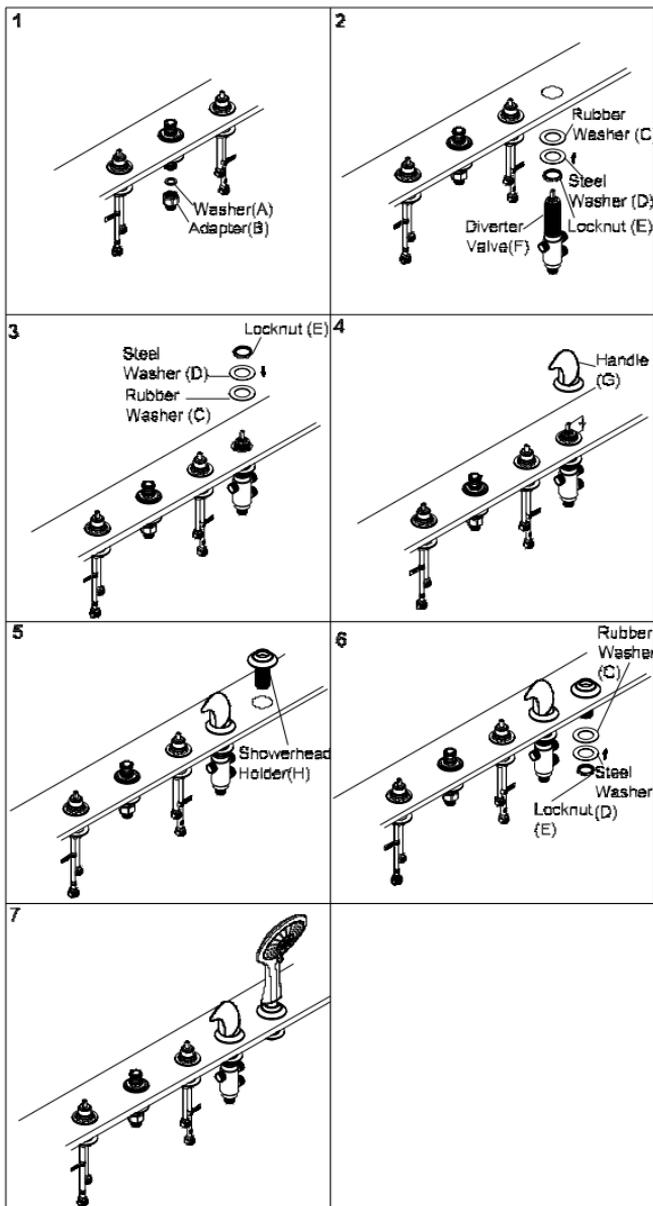

Handheld Showerset Installation

- Carefully connect inlet and outlet hoses to the diverter valve as shown in the layout. apply teflon tape to threaded connections if necessary.
- Turn on both roman tub valve handles. check for any leaks. rotate the diverter valve handle and check if the water diverts properly from spout to handheld showerhead.

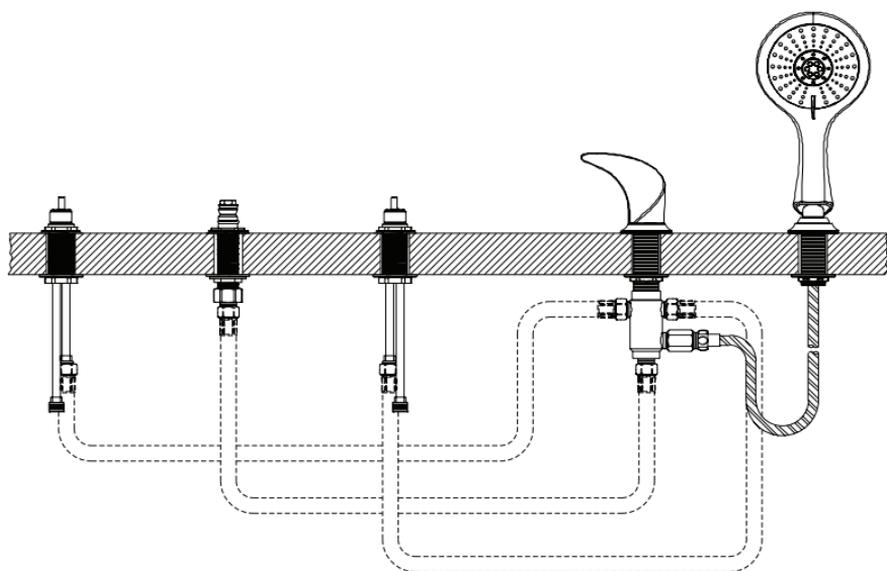

Layout-Connection Diagram
Between Roman Tub Valve
and Handheld Showerset

For more care information or trouble shooting inquiries about your Pioneer Product, please see the contact information on the back page.



ENGINEERING EXCELLENCE

3325 S. Garfield Ave. | Commerce, CA 90040
Telephone: (800) 338-9468 | (323) 888-8873 | Fax: (323) 888-9515
Hours: M - F, 7:30am to 5:00pm PST
www.pioneerind.com