

SMOOTH® Flushometer Hardwired Side-Mount-Operator-Over-The-Handle


AC powered, sensor activated retrofit unit for exposed closet and urinal flushometers.

PARTS LIST

Item No.	Code No.	Part No.	Description
1.	3305201	EL-600-A	Side Mount Operator for Water Closets (Toilets) and Urinals
2.	—	EL-612-A	Wall Flange Hardware Mounting Kit
—	—	—	Replacement Power Adapter

ACCESSORY TRANSFORMERS

—	0345095	EL-386	120 VAC/6 VAC, 50/60 Hz (3 VA) Plug-in (will operate 1 unit)
—	0345125	EL-451	120 VAC/6 VAC, 50/60 Hz (25 VA) Box Mount (will operate up to 8 units)

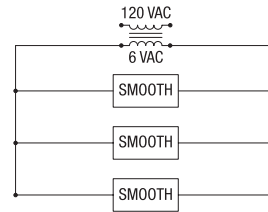

One EL-386 Transformer serves one (1) OPTIMA® Closet/Urinal flushometer.
One EL-451 Transformer serves up to eight (8) OPTIMA® Closet/Urinal flushometers.

ADJUSTMENT PROCEDURES

Mode A

The SMOOTH unit may be reset to normal range by fully pressing and holding in the Override Handle until the Red LED light in the Sensor Window illuminates. Then immediately release the Override Handle.

Mode B

The SMOOTH unit may be set to reduced range for closet applications by pressing and holding in the Override Handle until the Red LED light in the Sensor Window flashes a slow long blinking light. Then immediately release the Override Handle.

Mode C (Urinal Only)

The SMOOTH unit may be set to reduced range by pressing and holding in the Override Handle until the Red LED light in the Sensor Window displays a rapid on and off blinking light. Then immediately release the Override Handle.

CARE AND CLEANING OF CHROME AND SPECIAL FINISHES

DO NOT USE abrasive or chemical cleaners to clean flushometers as they may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, the flushometer should be protected from any splattering of cleaner. Acids and cleaning fluids can discolor or remove chrome plating.

**When assistance is required, please contact
Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).**